
 


CFLBC






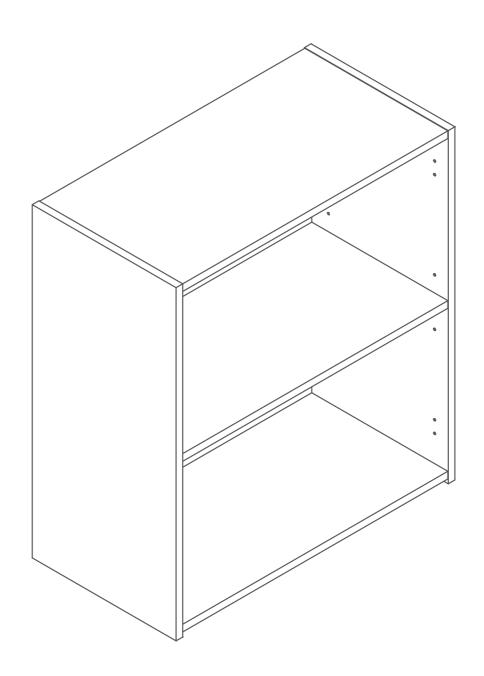








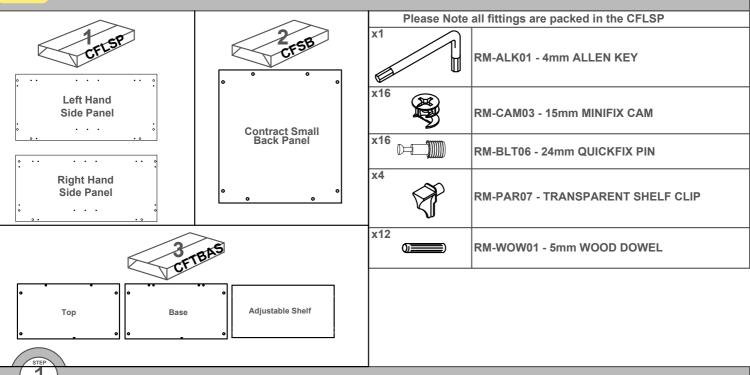

Insert Dowels, Woodfix Pins and Shelf Clips into both side panels as shown

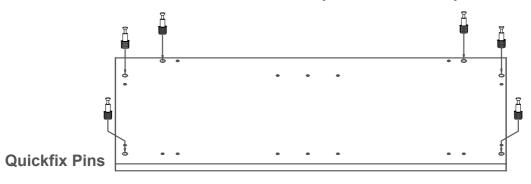


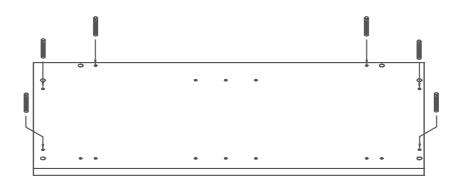

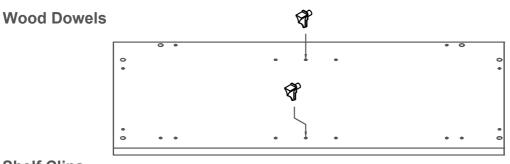



Shelf Clips

Right Hand Side Panel Shown Repeat for Left Hand Side Panel

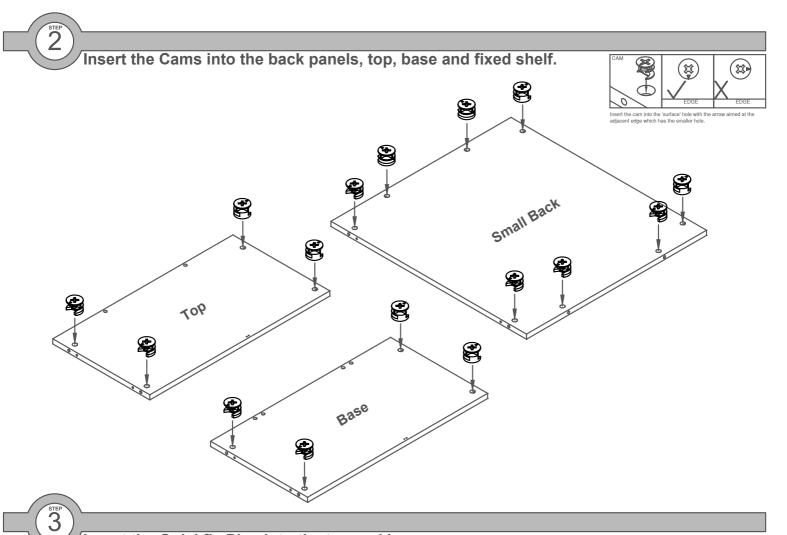


Insert the Quickfix Pins into the top and base.
The base will need to be turned over to insert pins in the opposite face.

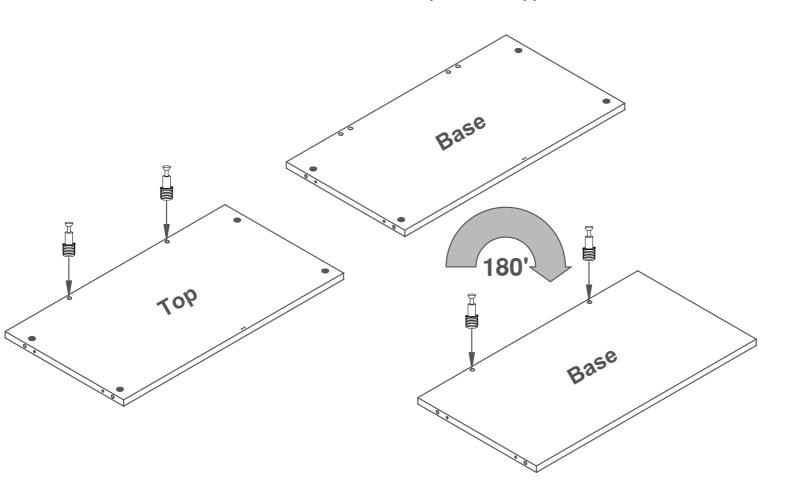

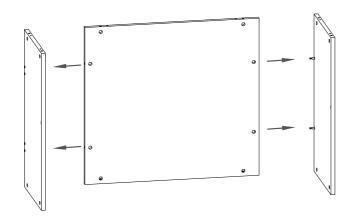


 ATTACH THE TOP AND BASE TO THE BACK PANEL.
PLEASE ENSURE THAT ALL CAM FITTINGS ARE TIGHTENED




Make sure you turn the cams as far as they will easily go more than half a turn.



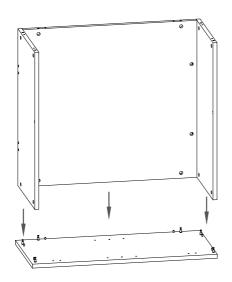


ATTACH THE PART ASSEMBLED CARCASS TO THE RH SIDE PANEL.

 PLEASE ENSURE THAT ALL CAM FITTINGS ARE TIGHTENED.



Make sure you turn the cams as far as they will easily go - more than half a turn.



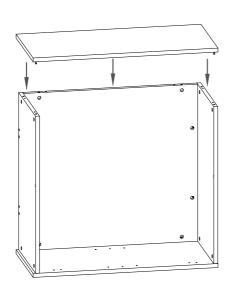


FINALLY ATTACH THE PART ASSEMBLED CARCASS TO THE LH SIDE PANEL.

PLEASE ENSURE THAT ALL CAM FITTINGS ARE TIGHTENED.




CFLDP

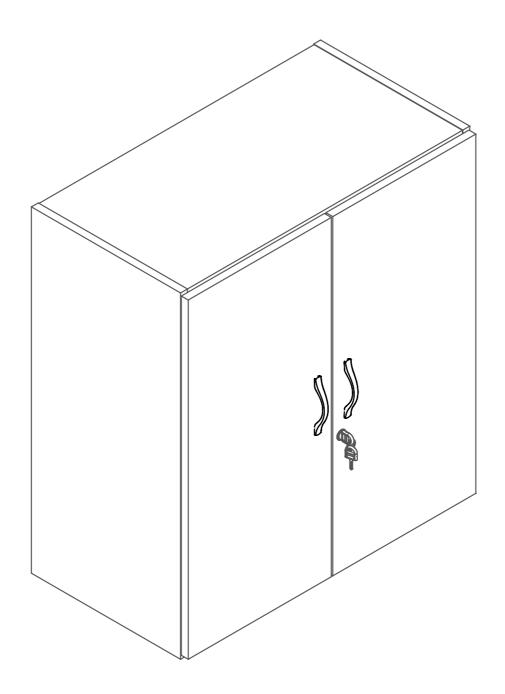






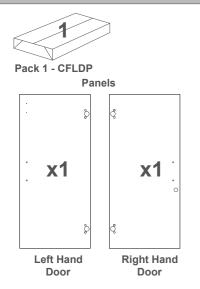

Insert Speed Fix Hinges into both doors.


Screws locked

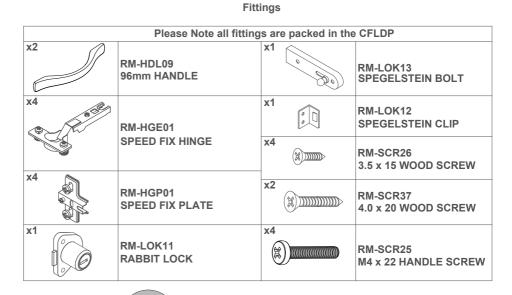

Attach Spegelstein Bolt to Left Hand Door

Attach Rabbit Lock to Right Hand Door Turn screws through 90 degrees Screws un-locked

Attach Spegelstein Clip to the underside of the Top.

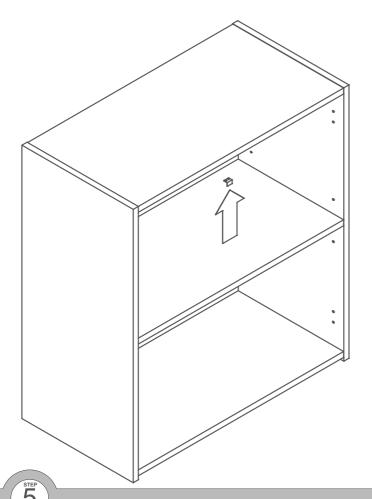


FITTINGS REQUIRED

1	Spegelstein clip RM-LOK12	
2	Screw 3.5x15 RM-SCR26	(X))))))))

STEP 3


The Spegelstein clip fits to the underside of the top .

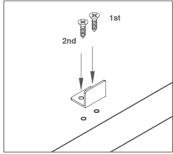

Locate the Spegelstein clip with 1st screw.


Make sure clip is parallel to the front of the top and secure with the second screw.

Attach Speed Fix Plates to both Side Panels

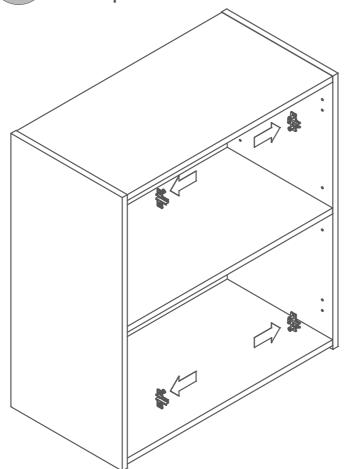

FITTINGS REQUIRED




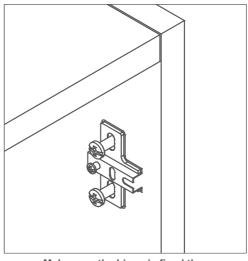



Make sure the hinge is fixed the correct way round

6

  Attach the doors to your bookcase carcass, tighten hinge as shown below.

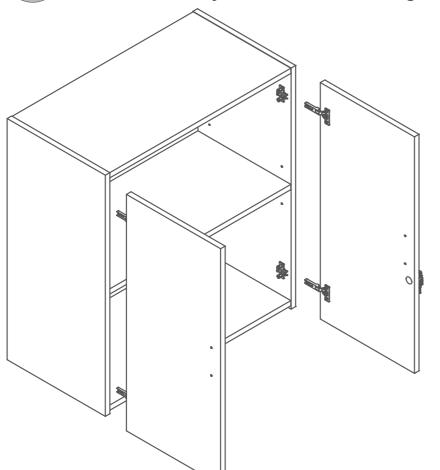







(7)

Fix the Handles to the doors as shown.

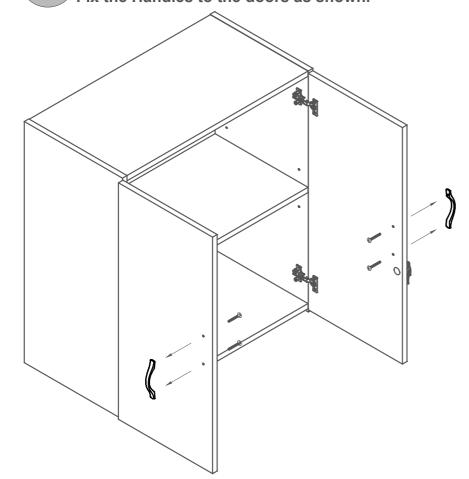






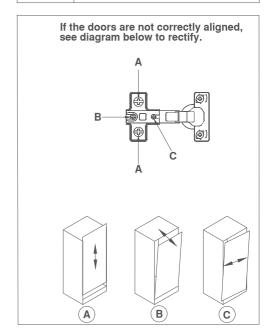




CFMBC

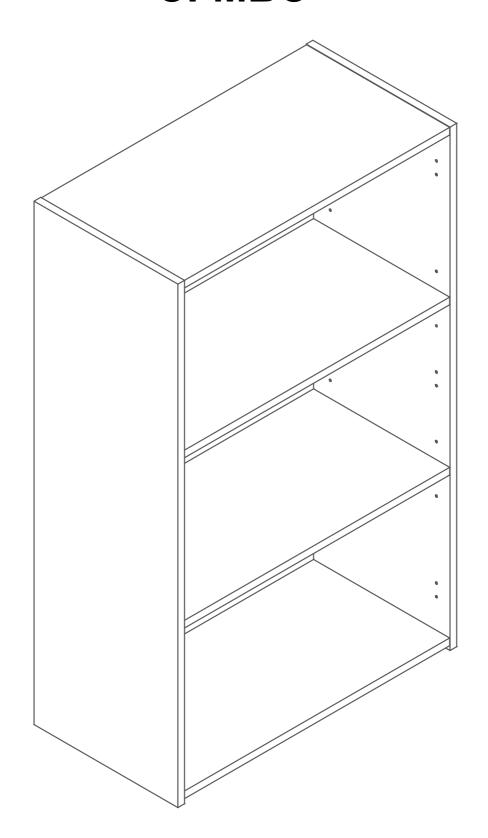




 










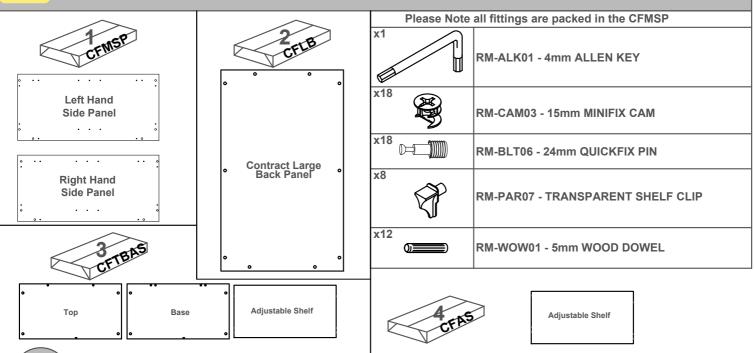


Insert Dowels, Woodfix Pins and Shelf Clips into both side panels as shown

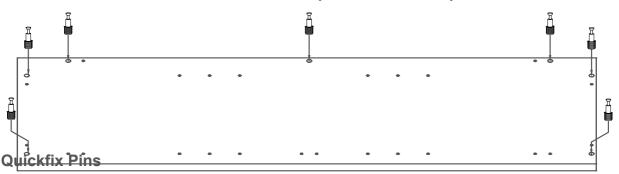


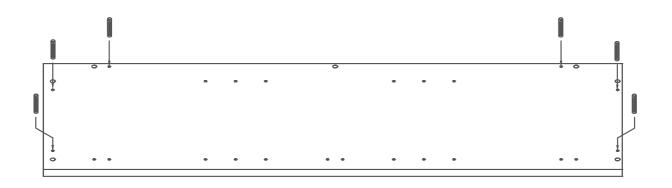


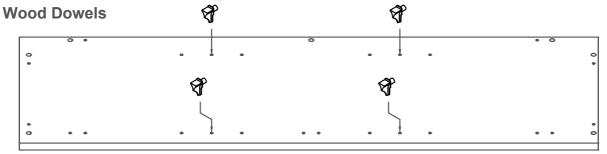

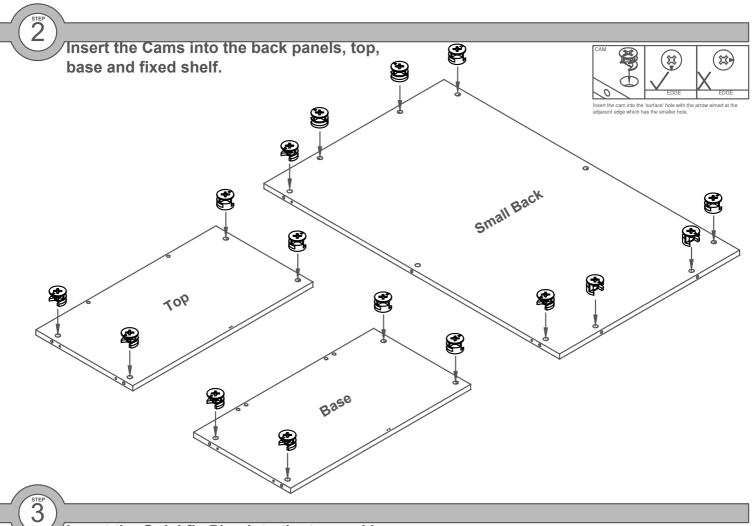


Insert the Quickfix Pins into the top and base.
The base will need to be turned over to insert pins in the opposite face.

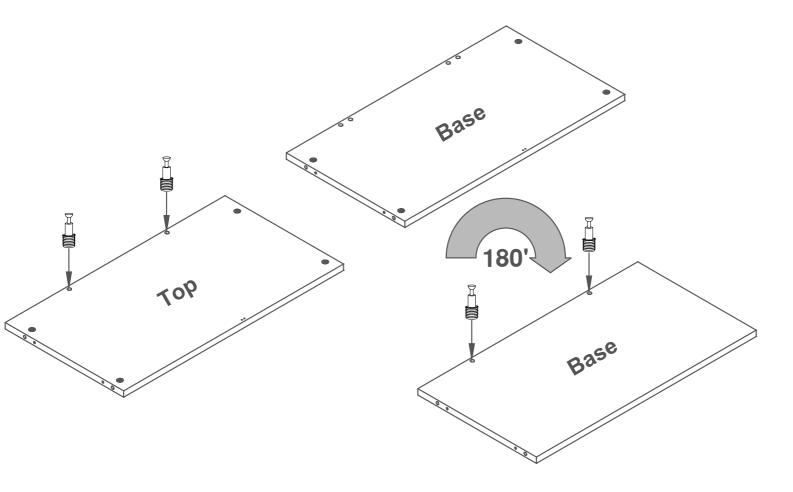

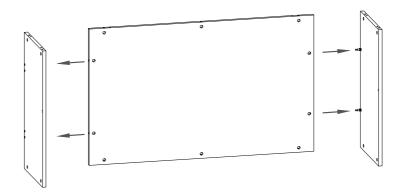


 ATTACH THE TOP AND BASE TO THE BACK PANEL. PLEASE ENSURE THAT ALL CAM FITTINGS ARE TIGHTENED




Make sure you turn the cams as far as they will easily go more than half a turn.

5

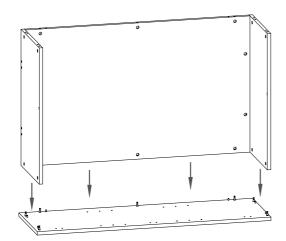

ATTACH THE PART ASSEMBLED CARCASS TO THE RH SIDE PANEL.

 PLEASE ENSURE THAT ALL CAM FITTINGS ARE TIGHTENED.



Make sure you turn the cams as far as they will easily go - more than half a turn.






FINALLY ATTACH THE PART ASSEMBLED CARCASS TO THE LH SIDE PANEL.

PLEASE ENSURE THAT ALL CAM FITTINGS ARE TIGHTENED.




CFMDP

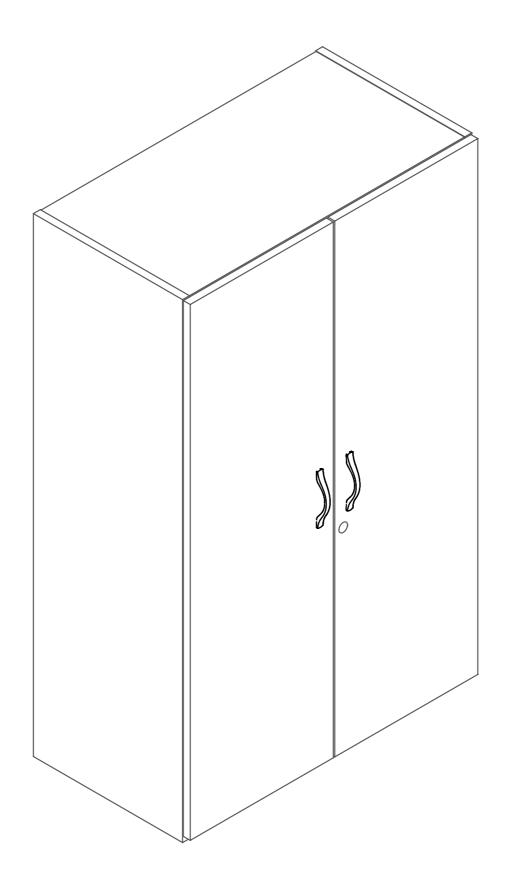






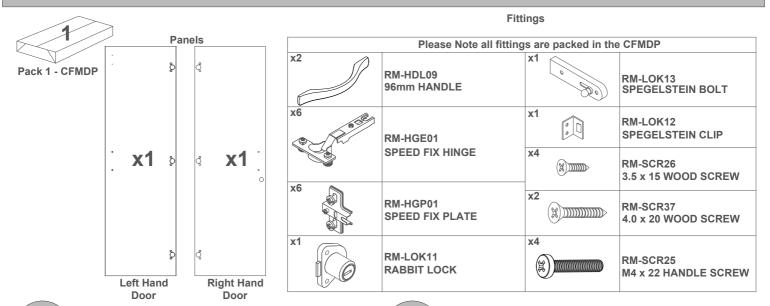


Insert Speed Fix Hinges into both doors.

Attach Spegelstein Bolt to Left Hand Door

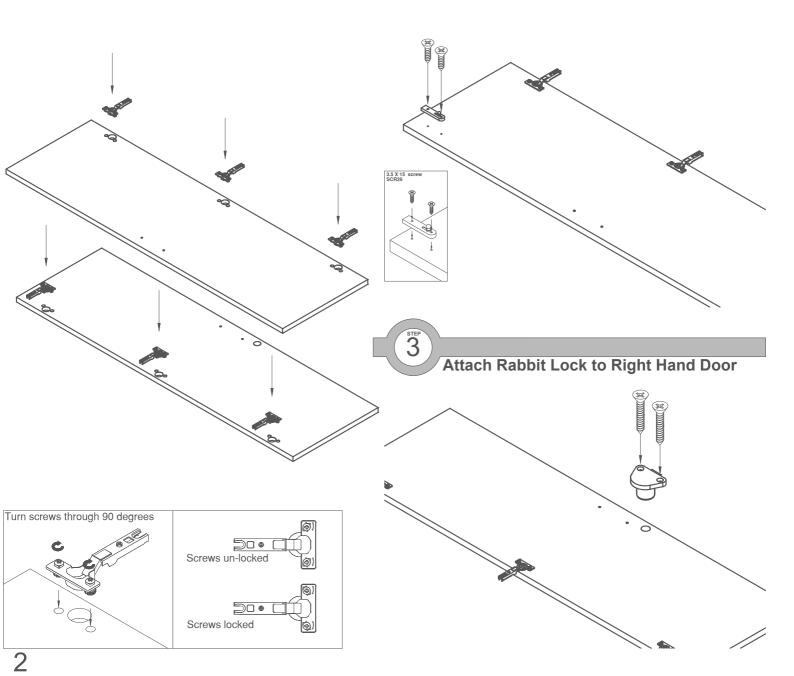

Attach Spegelstein Clip to the underside of the Top.

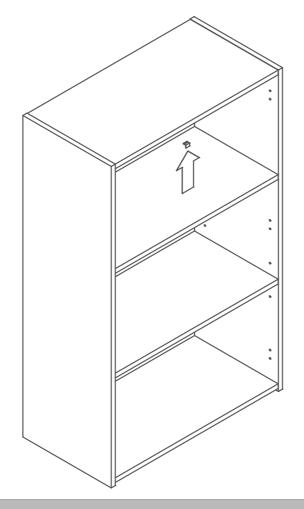


FITTINGS REQUIRED

1	Spegelstein clip RM-LOK12	
2	Screw 3.5x15 RM-SCR26	(X)

STEP 3

The Spegelstein clip fits to the underside of the top .

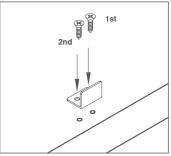


Locate the Spegelstein clip with 1st screw.

Make sure clip is parallel to the front of the top and secure with the second screw.


5

Attach Speed Fix Plates to both Side Panels

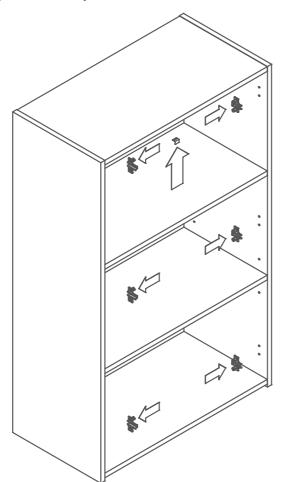


FITTINGS REQUIRED




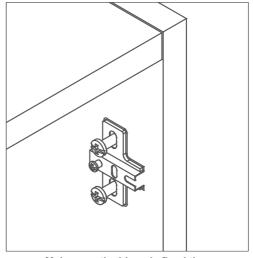


Make sure the hinge is fixed the correct way round

  
Attach the doors to your bookcase carcass, tighten hinge as shown below.

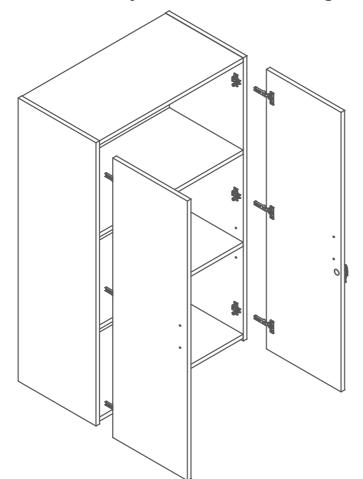








Fix the Handles to the doors as shown.

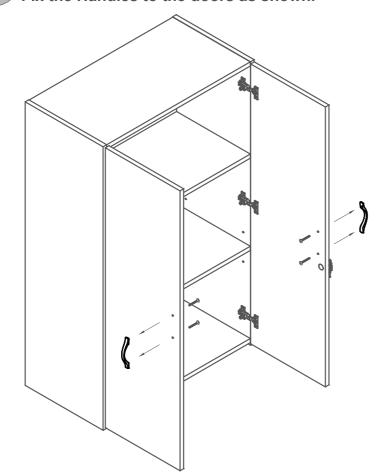

 


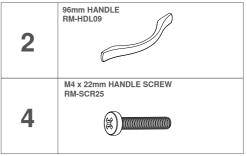

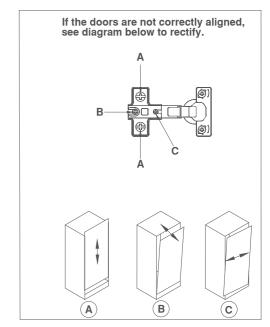



CFTBC

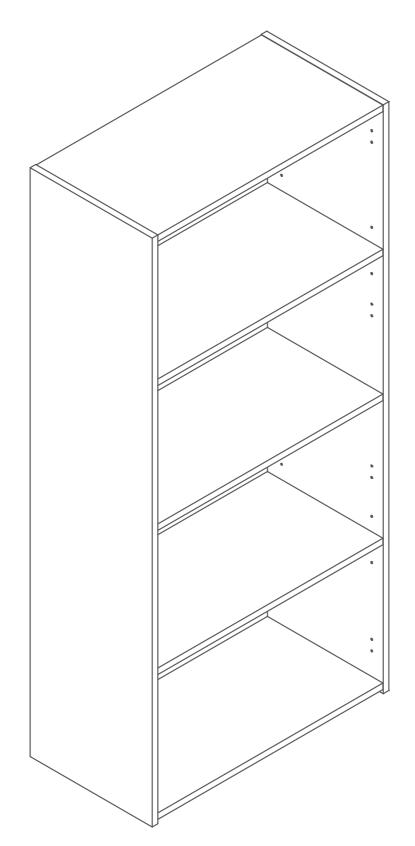















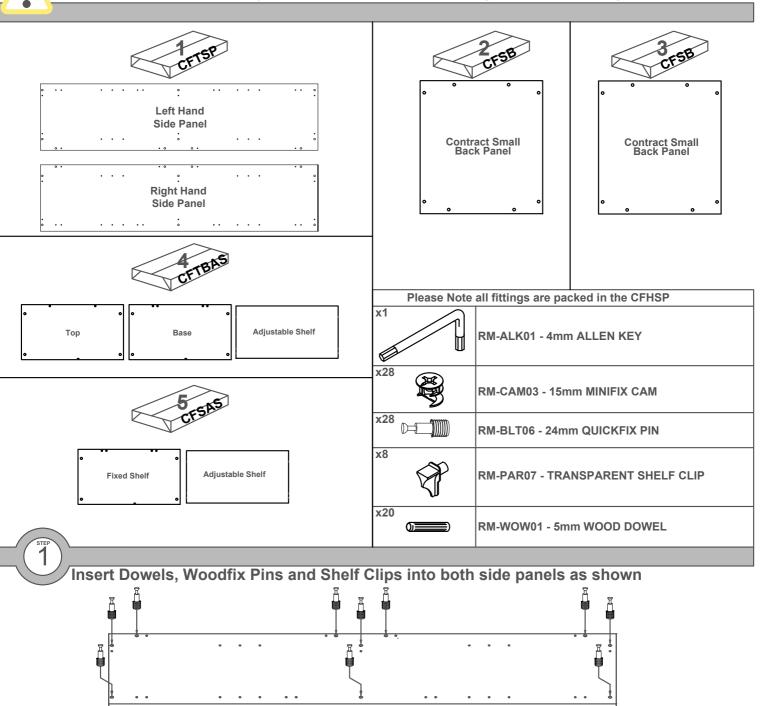

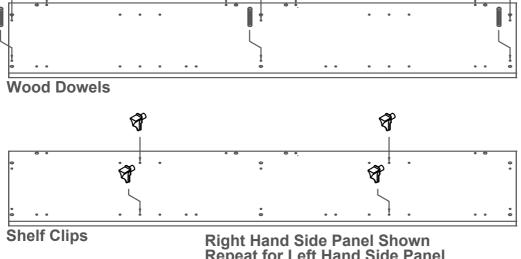



Quickfix Pins

2


Insert the Cams into the back panels, top, base and fixed shelf. Small Back Small Back Fixed If Base 708 3


Insert the Quickfix Pins into the top, base and fixed shelf. The base and fixed shelf need to be turned over to insert pins in the opposite face.

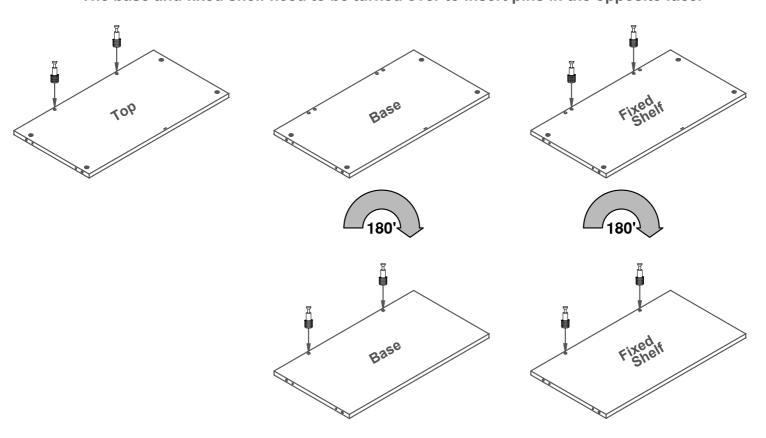

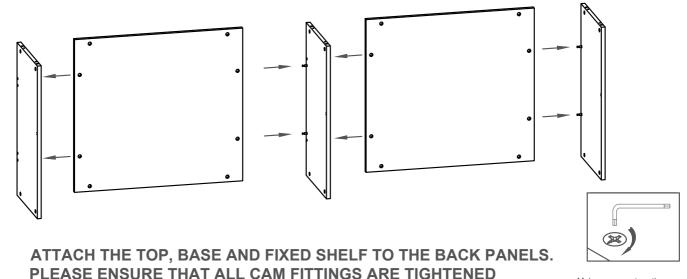

 
Make sure you turn the cams as far as they will easily go more than half a turn.



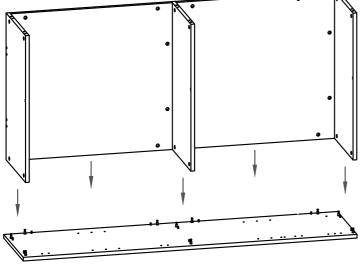


ATTACH THE PART ASSEMBLED CARCASS TO THE RH SIDE PANEL.

 PLEASE ENSURE THAT ALL CAM FITTINGS ARE TIGHTENED.




Make sure you turn the cams as far as they will easily go more than half a turn.



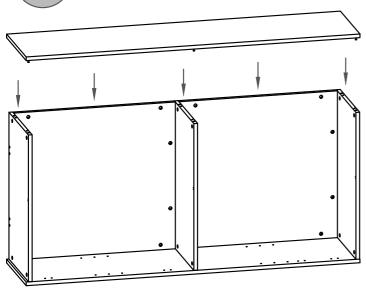

FINALLY ATTACH THE PART **ASSEMBLED CARCASS TO THE** LH SIDE PANEL.

 
PLEASE ENSURE THAT ALL **CAM FITTINGS ARE** TIGHTENED.



Make sure you turn the cams as far as they will easily go more than half a turn.





CFTDP

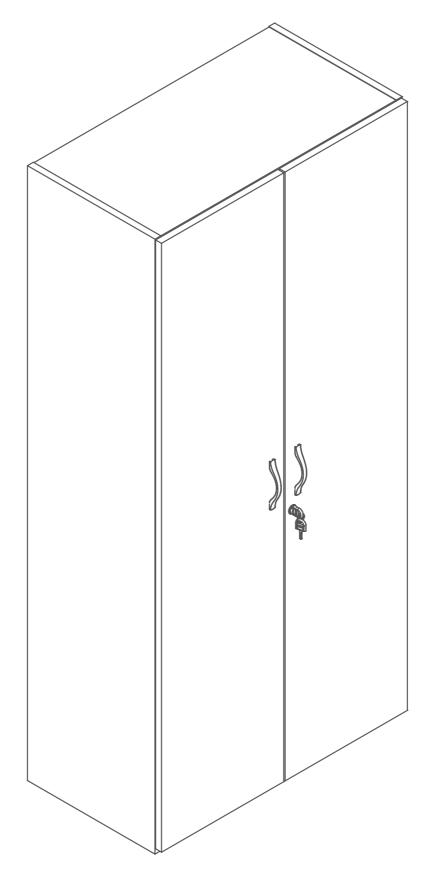






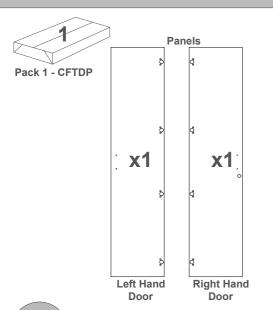

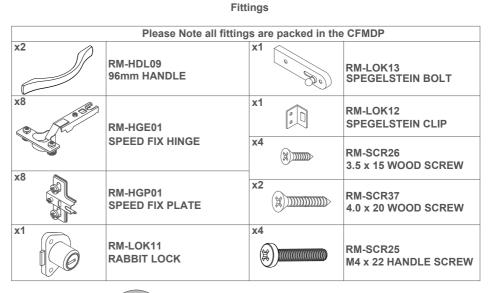


Insert Speed Fix Hinges into both doors.

Attach Spegelstein Bolt to Left Hand Door

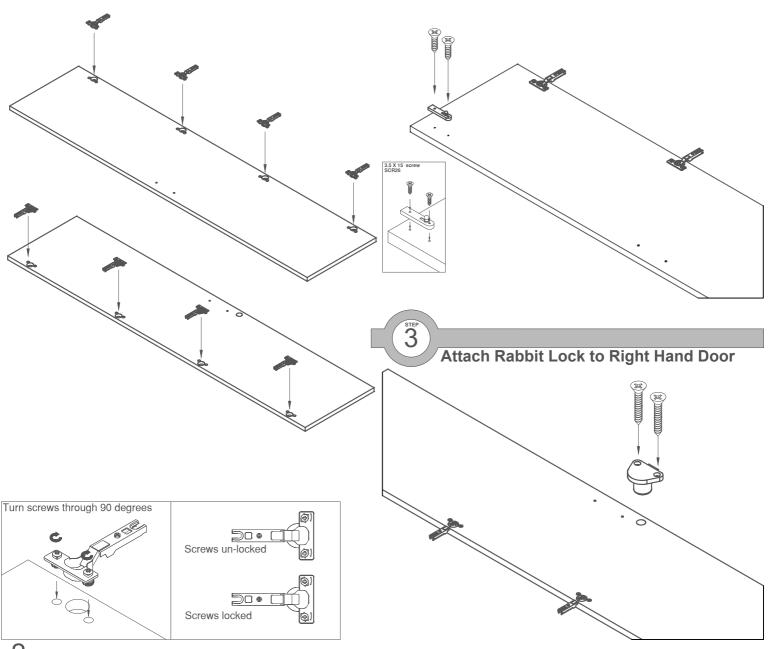

Attach Spegelstein Clip to the underside of the Top.

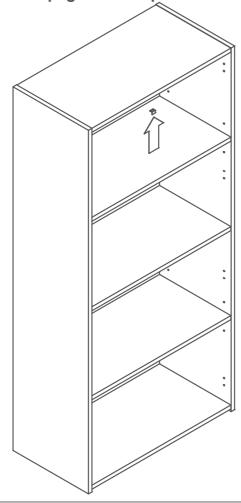


FITTINGS REQUIRED

1	Spegelstein clip RM-LOK12	
2	Screw 3.5x15 RM-SCR26	*)

STEP 3


The Spegelstein clip fits to the underside of the top .

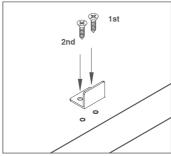

Locate the Spegelstein clip with 1st screw.


Make sure clip is parallel to the front of the top and secure with the second screw.

Attach Speed Fix Plates to both Side Panels

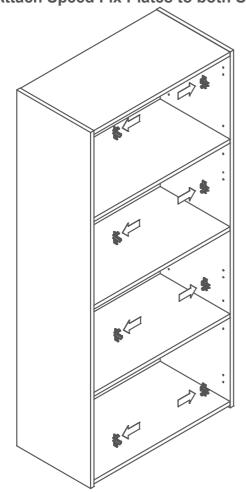


FITTINGS REQUIRED


Speed Fix Hinge RM-HGE01

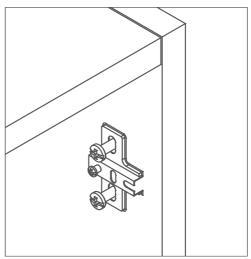


Make sure the hinge is fixed the correct way round

  
Attach the doors to your bookcase carcass, tighten hinge as shown below.

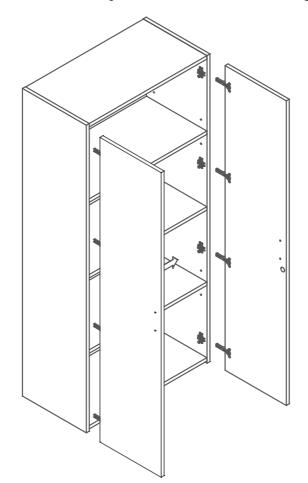






Fix the Handles to the doors as shown.

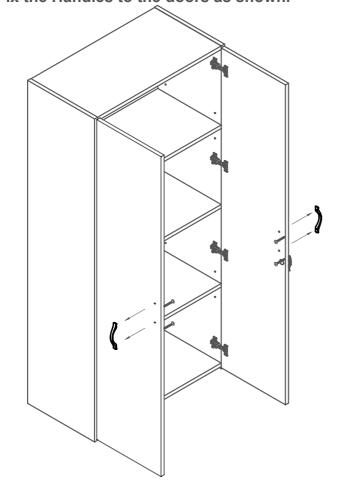




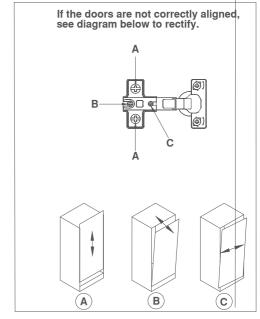



CFHBC

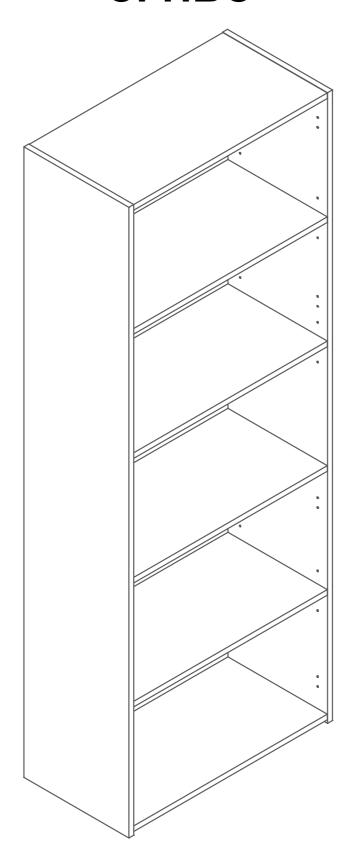


















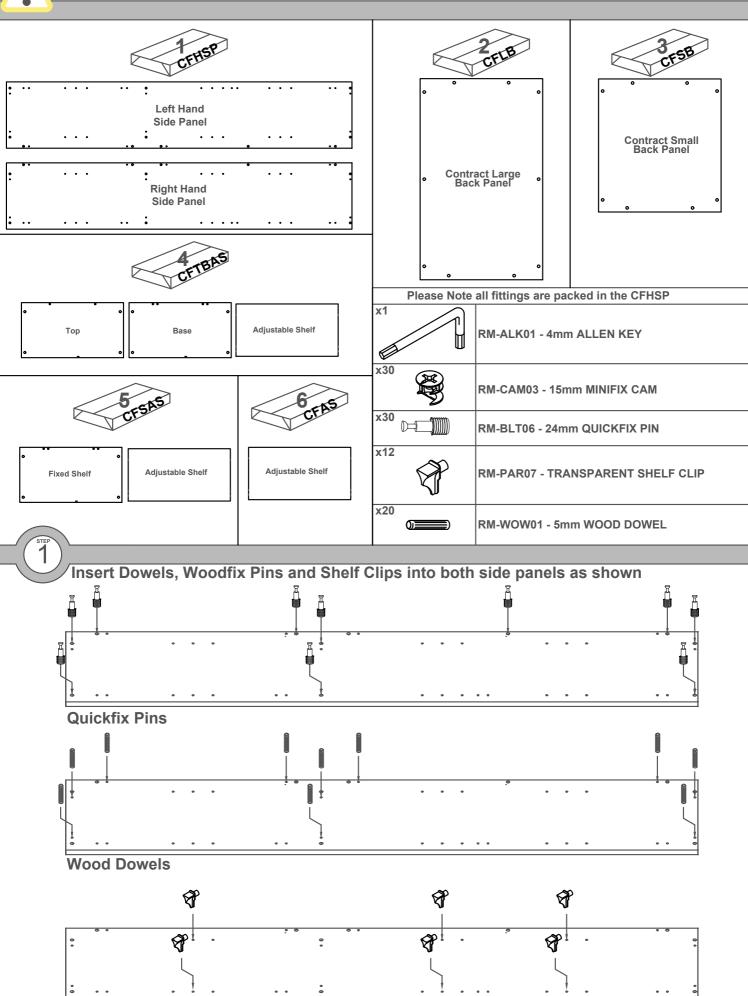


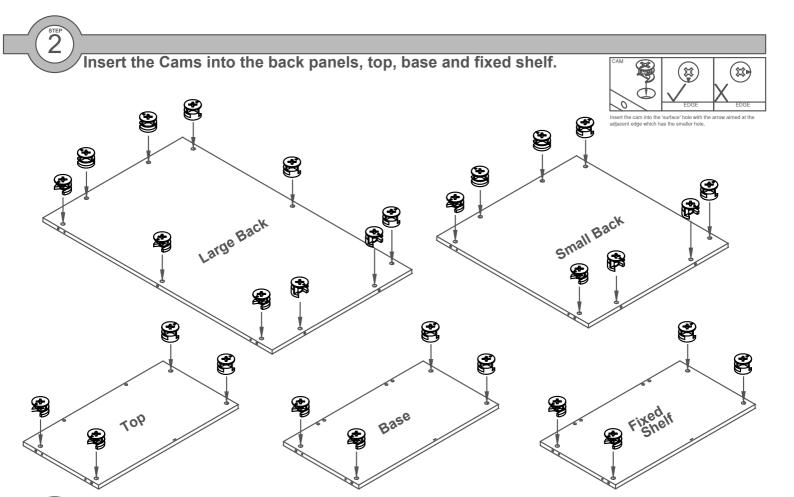

Insert the Quickfix Pins into the top, base and fixed shelf.
The base and fixed shelf need to be turned over to insert pins in the opposite face.

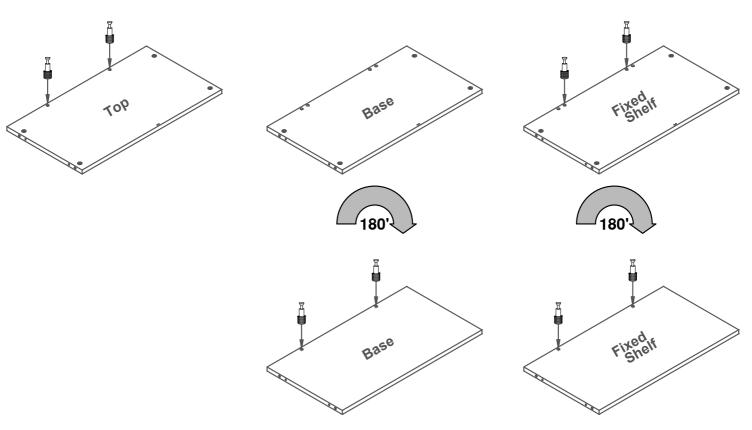




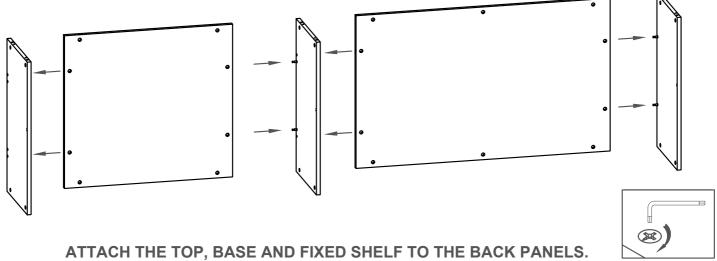


PLEASE ENSURE THAT ALL CAM FITTINGS ARE TIGHTENED

Make sure you turn the cams as far as they will easily go -

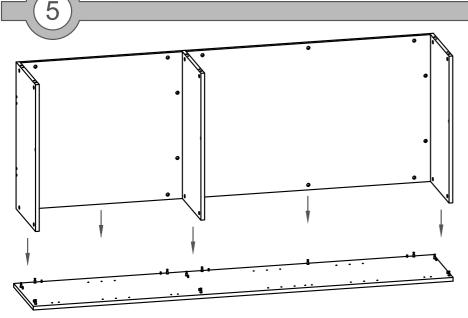


ATTACH THE PART ASSEMBLED CARCASS TO THE RH SIDE PANEL.

 PLEASE ENSURE THAT ALL CAM FITTINGS ARE TIGHTENED.



more than half a turn.

Make sure you turn the cams as far as they will easily go - more than half a turn.

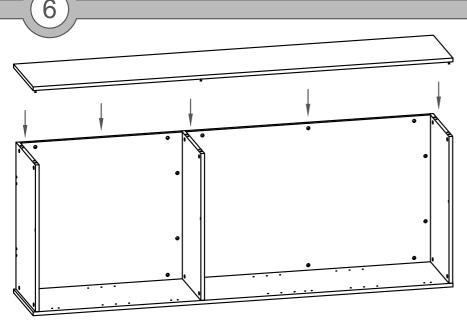


FINALLY ATTACH THE PART ASSEMBLED CARCASS TO THE LH SIDE PANEL.

PLEASE ENSURE THAT ALL CAM FITTINGS ARE TIGHTENED.

Make sure you turn the cams as far as they will easily go - more than half a turn.





CFHDP

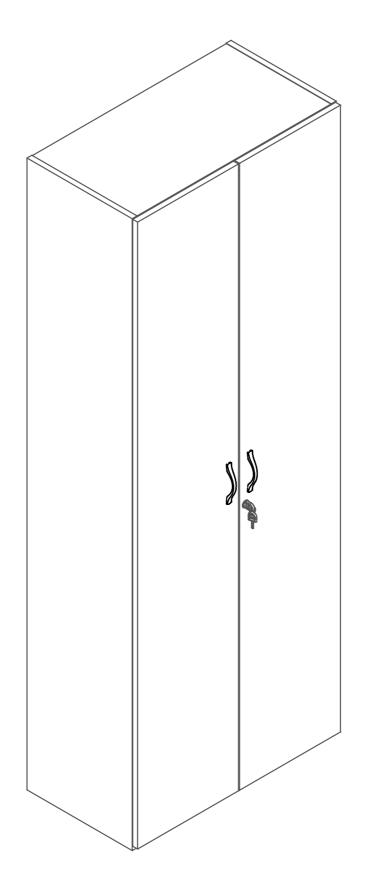







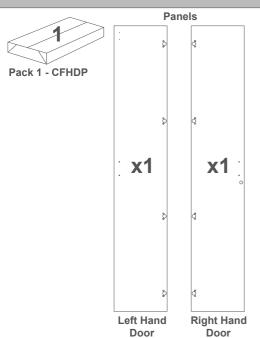

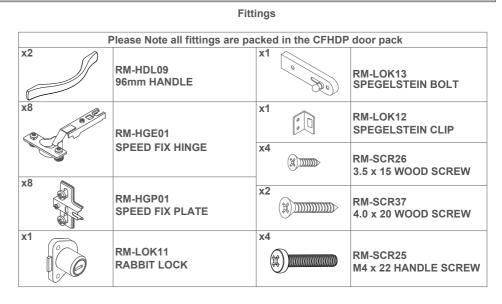

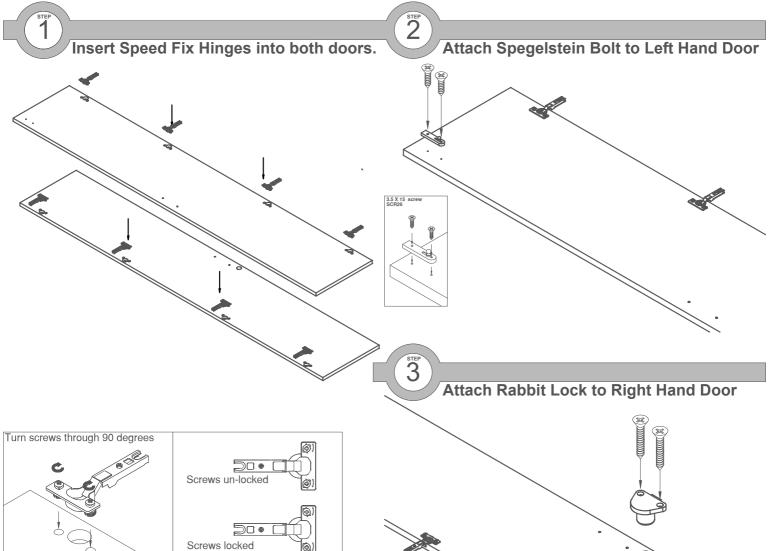

Attach Spegelstein Clip to the underside of the Top.

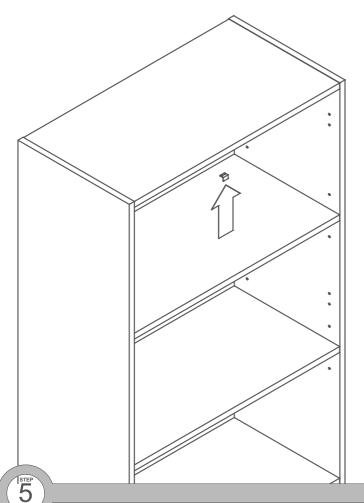


FITTINGS REQUIRED

1	Spegelstein clip RM-LOK12	
2	Screw 3.5x15 RM-SCR26	*)

STEP 3


The Spegelstein clip fits to the underside of the top .

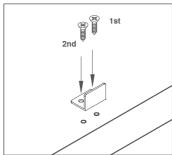

Locate the Spegelstein clip with 1st screw.


Make sure clip is parallel to the front of the top and secure with the second screw.

Attach Speed Fix Plates to both Side Panels

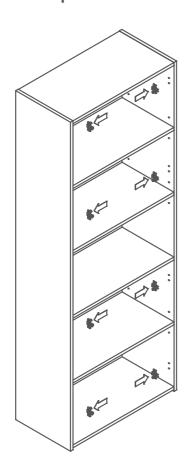


FITTINGS REQUIRED


Speed Fix Hinge
RM-HGE01

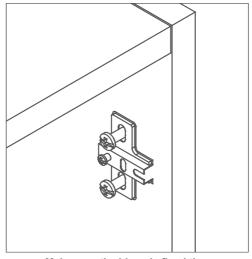


Make sure the hinge is fixed the correct way round

  Attach the doors to your bookcase carcass, tighten hinge as shown below.

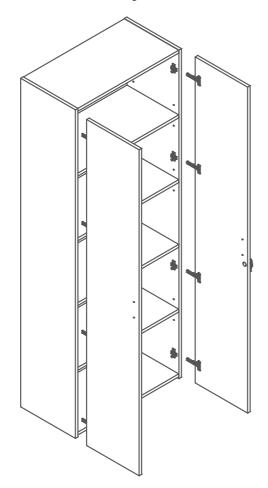





Fix the Handles to the doors as shown.

