


Setup - How to set-up your Solo-X wireless keyboard

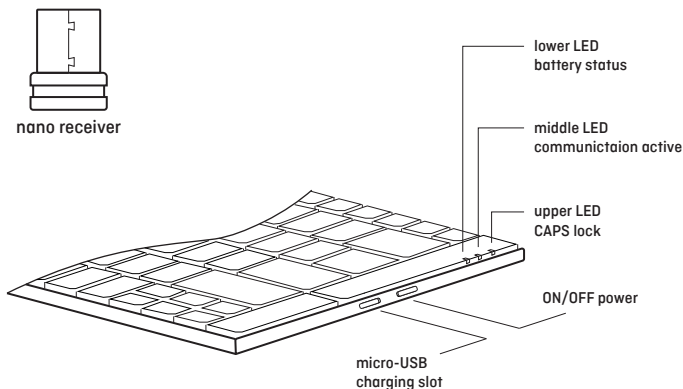

Multimedia Hotkeys function

FN + ESC	= media player
FN + F1	= play/pause
FN + F2	= previous track
FN + F3	= next track
FN + F4	= volume up
FN + F5	= volume down
FN + F6	= mute(windows)
FN + F7	= web home
FN + F8	= search
FN + F9	= favorite
FN + F10	= email
FN + F11	= screen lock
FN + F12	= my computer

System Requirements

PC with Windows XP, Windows Vista, Win 7, Win 8, Win 10

How to set up the keyboard

1. On the right side of the keyboard, switch the ON/OFF button to turn ON.
2. Insert the USB dongle provided into one of the PC's USB ports. The keyboard features plug-n-play software, so there is no additional action required.
3. If keyboard does not function correctly, then reset as described on the right.

LED light functions

There are 3 LEDs on the right upper corner of the keyboard:

1. Lower: Battery status
 - RED - battery is low/charging via USB
 - GREEN - fully charged
2. Middle: Blue when USB dongle gets connected to the computer and communication between keyboard and computer is active.
3. Upper: Blue when CAPS lock is active.

How to recharge

On the right side of the keyboard there is a micro-USB slot. To recharge from the PC, directly use the cable provided or alternatively use a standard phone charger with no power charging function.

How to recharge

On the right side of the keyboard there is a micro-USB slot. To recharge from the PC, directly use the cable provided or alternatively use a standard phone charger with no power charging function.

How to reset

In case the keyboard encounters error in communication with the computer, follow the steps below to reset to factory settings:

1. Check if the battery level is too low. If lower LED is RED, then recharge is required.
2. Press "ESC" and "K" keys at the same time, and after 2 seconds insert the USB dongle in the PC's USB port, keeping the key pressed.

Riser strip

A magnetic riser strip is included with the keyboard and if required it will self locate to the embedded magnets at the top of the keyboard base.