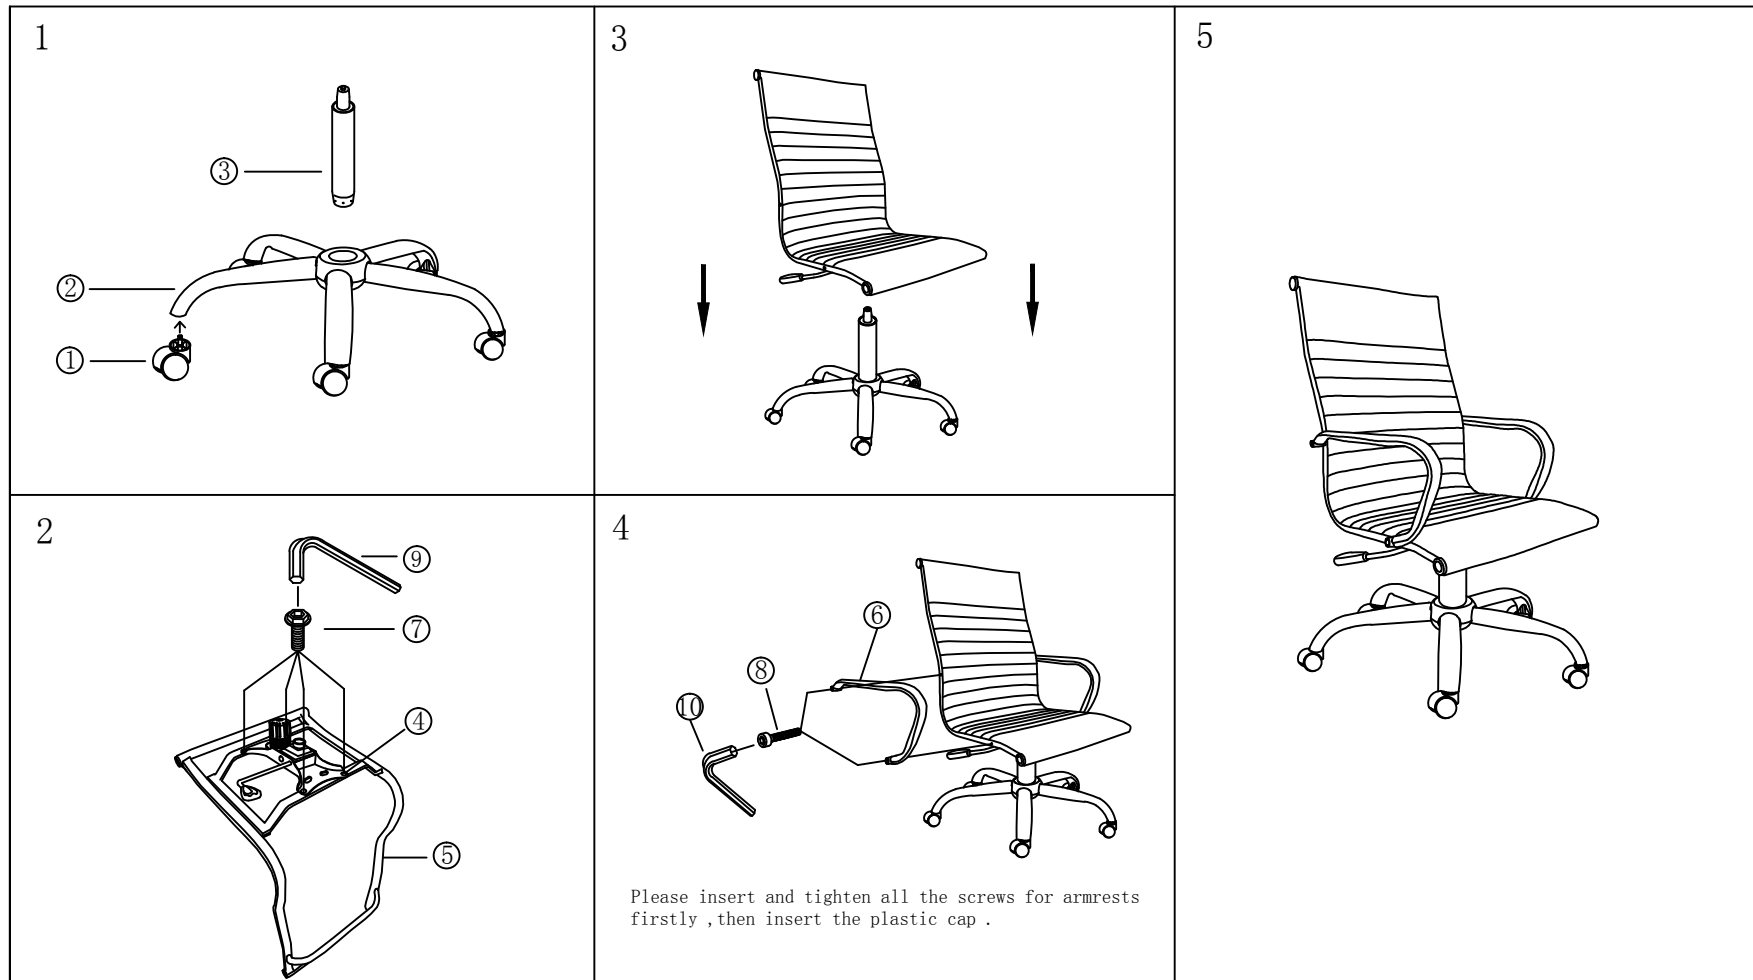












Nola High Back ASSEMBLY INSTRUCTION



Please insert and tighten all the screws for armrests firstly ,then insert the plastic cap .

①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩
CASTOR	5-STAR BASE	GASLIFT	MECHANISM	BACK&SEAT CUSHION	ARMREST	SCREW	SCREW	ALLEN KEY	ALLEN KEY
						M8*14	M8*40	M5	M6
									
5 PCS	1 PC	1 PC	1 PC	1 PC	1 PAIR	4 PCS	4 PCS	1 PC	1 PC

IMPORTANT NOTE - PLEASE ASSES ALL COMPONENTS PRIOR TO DISPOSAL OF PACKAGING AND ASSEMBLY OF CHAIR