



RU16DT



1600mm Straight Reception Desk

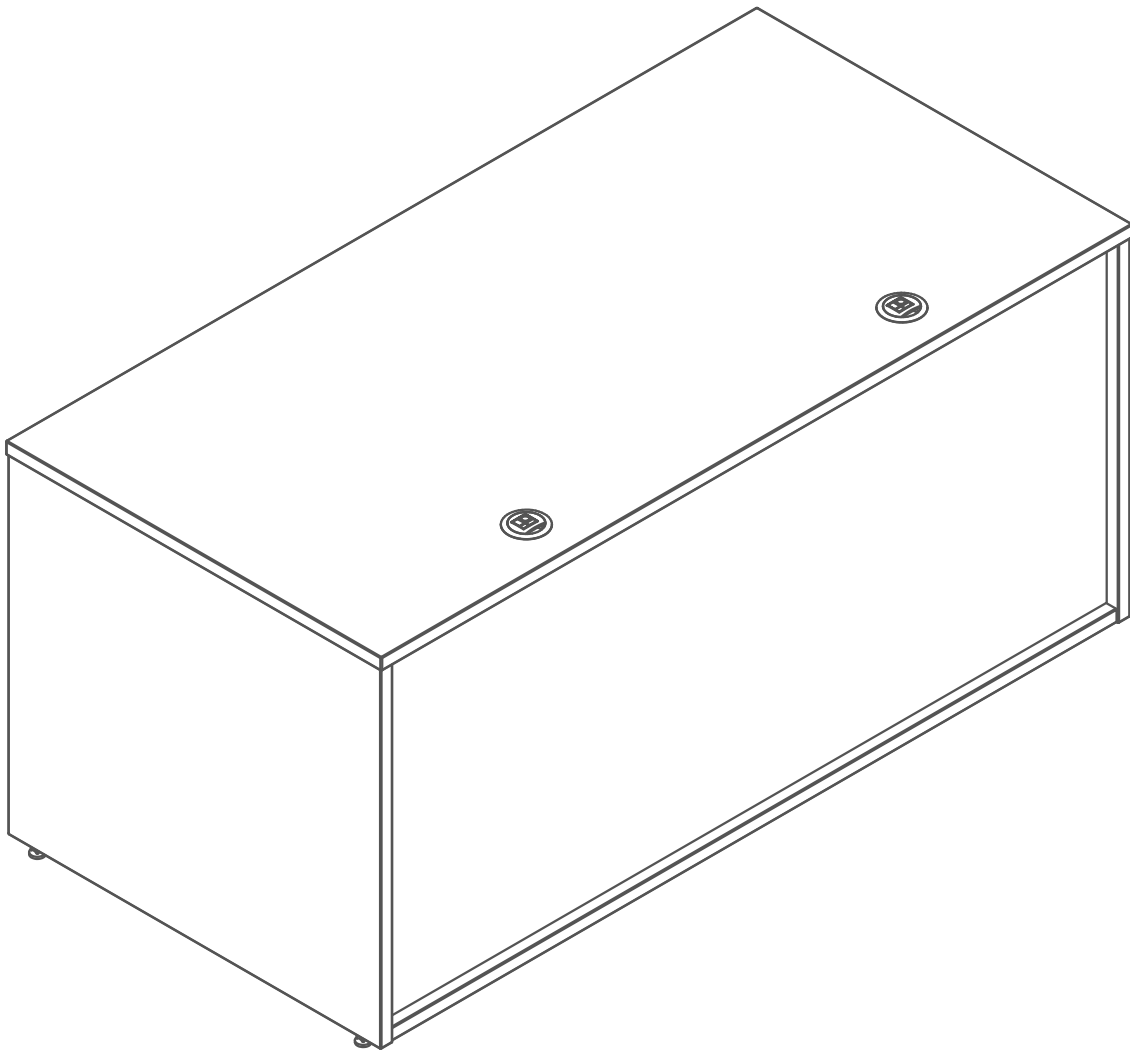


**TOOLS REQUIRED
FOR ASSEMBLY**

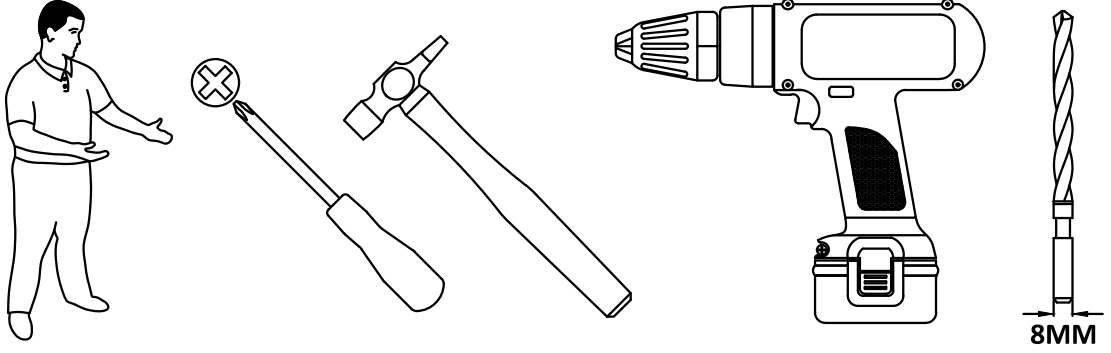


**DONT STRUGGLE
2 MAN LIFT**

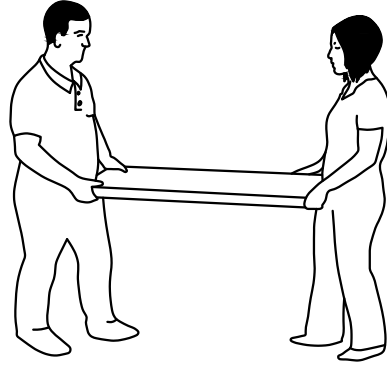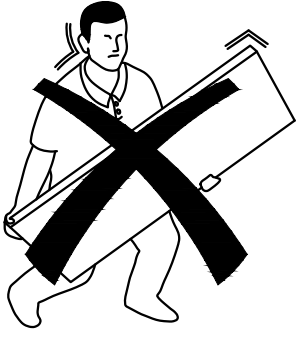



**ALWAYS HANDLE
ITEMS WITH CARE**

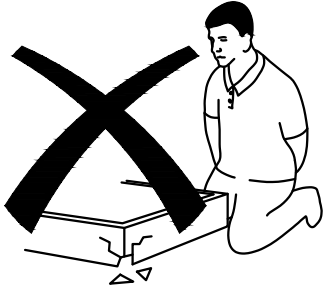

**IF UNSURE CALL
FOR ASSISTANCE**



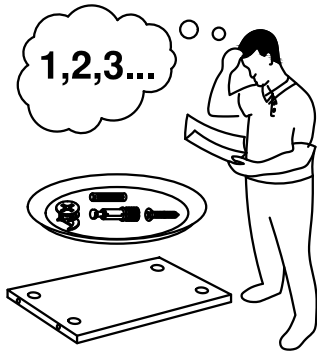


**KEEP FITTINGS AWAY
FROM CHILDREN**



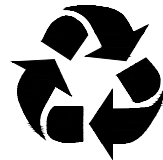
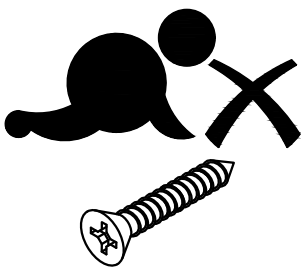





Please check that you have all the panels!

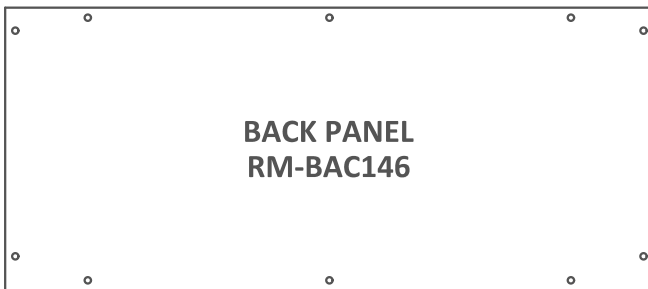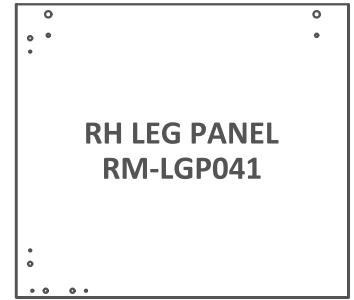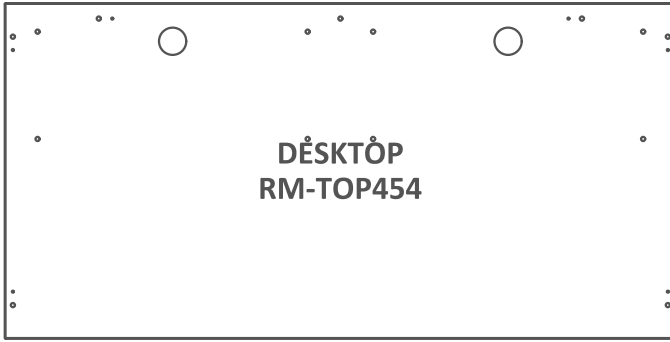

Please check that you have all the fittings!

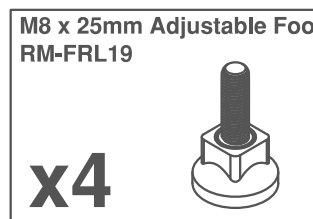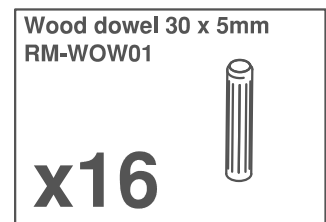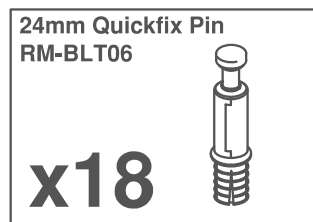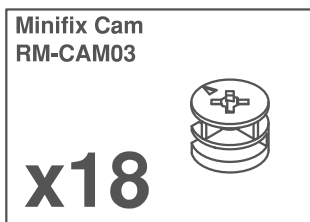

1

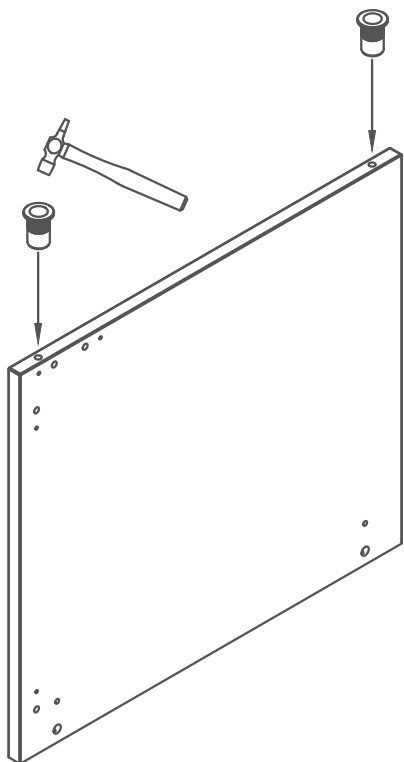


M8 Gesipa Insert
RM-NUT04

x4



2

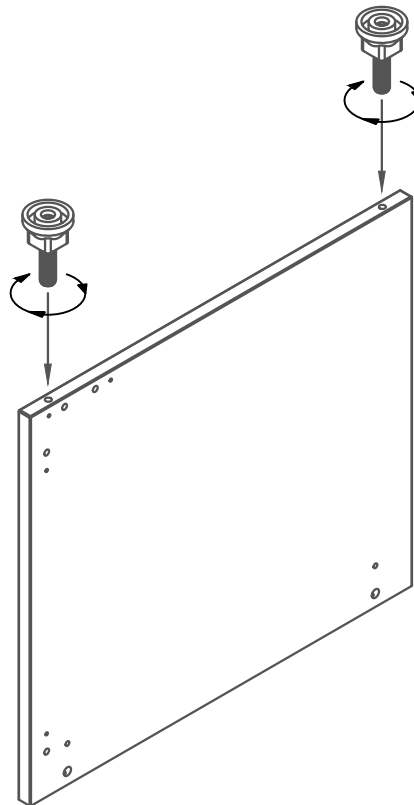


M8 x 25mm Adj Foot
RM-FRL19

x4



3

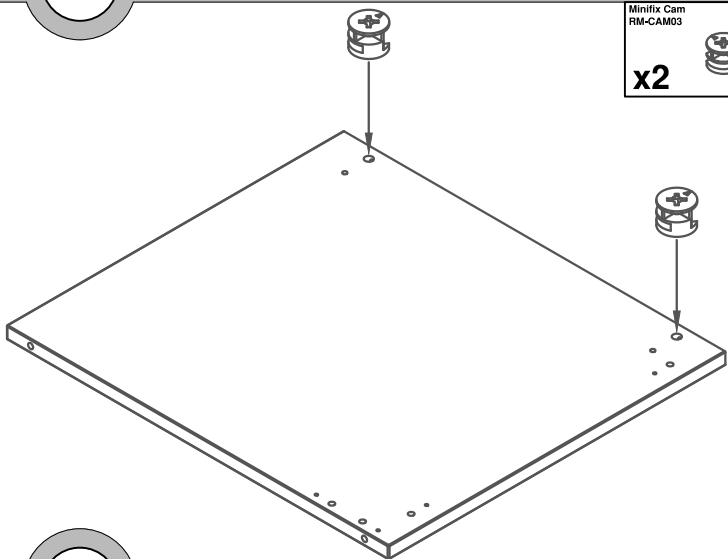


Minifix Cam
RM-CAM03

x2



4

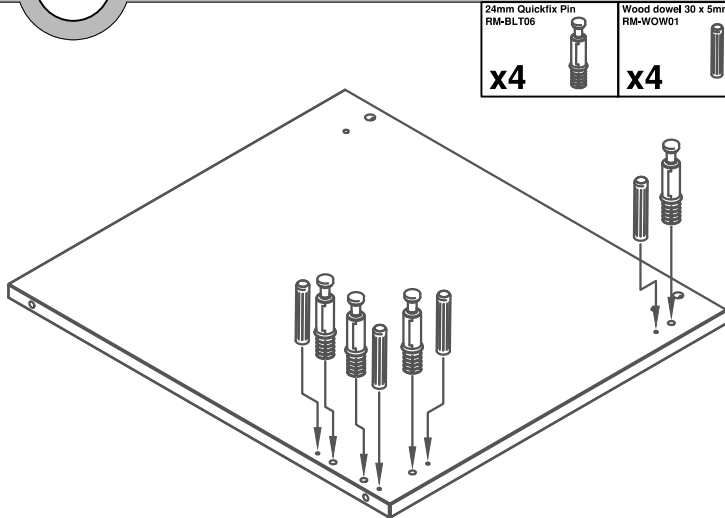

24mm Quickfix Pin
RM-BLT06

x4




Wood dowel 30 x 5mm
RM-WOW01

x4



5

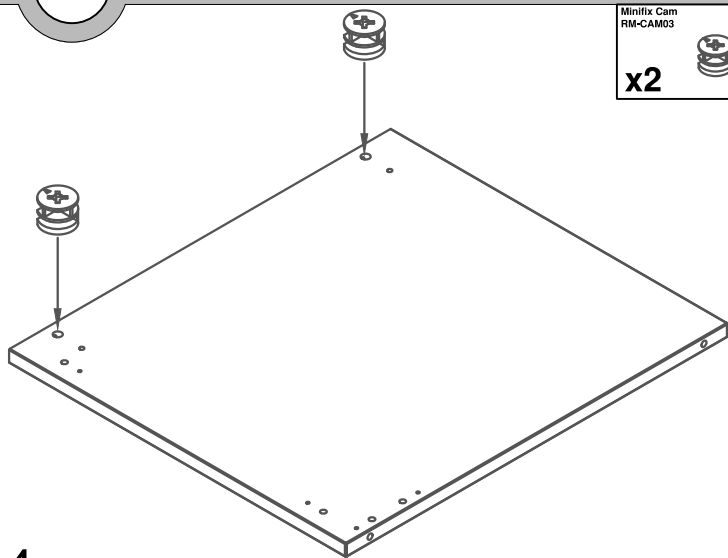


Minifix Cam
RM-CAM03

x2



6

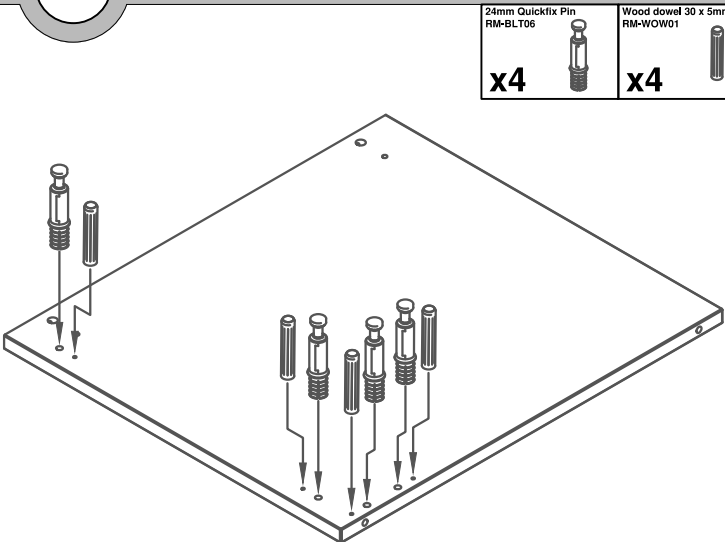

24mm Quickfix Pin
RM-BLT06

x4




Wood dowel 30 x 5mm
RM-WOW01

x4




7

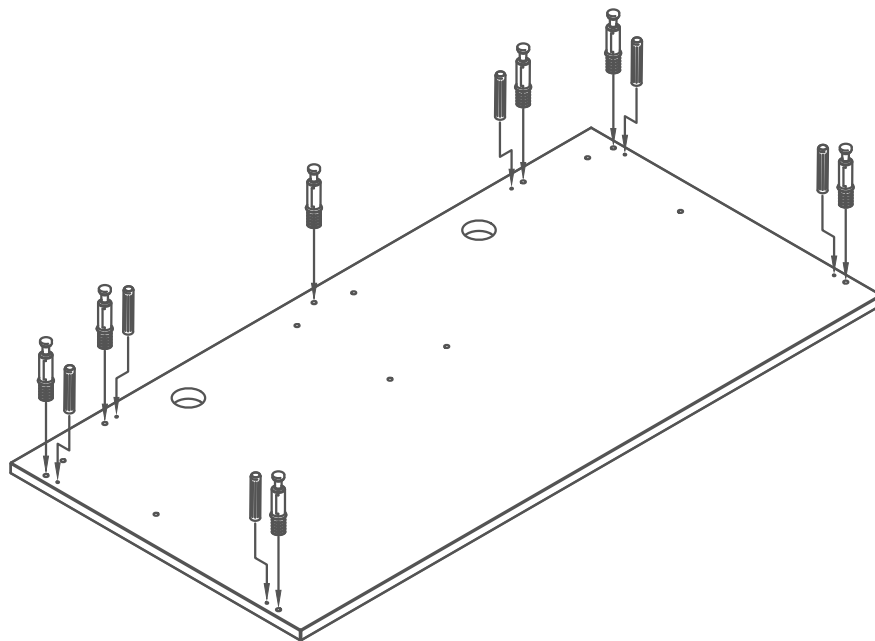


24mm Quickfix Pin RM-BLT05	Wood dowel 30 x 5mm RM-WOW01
x7	x6

8

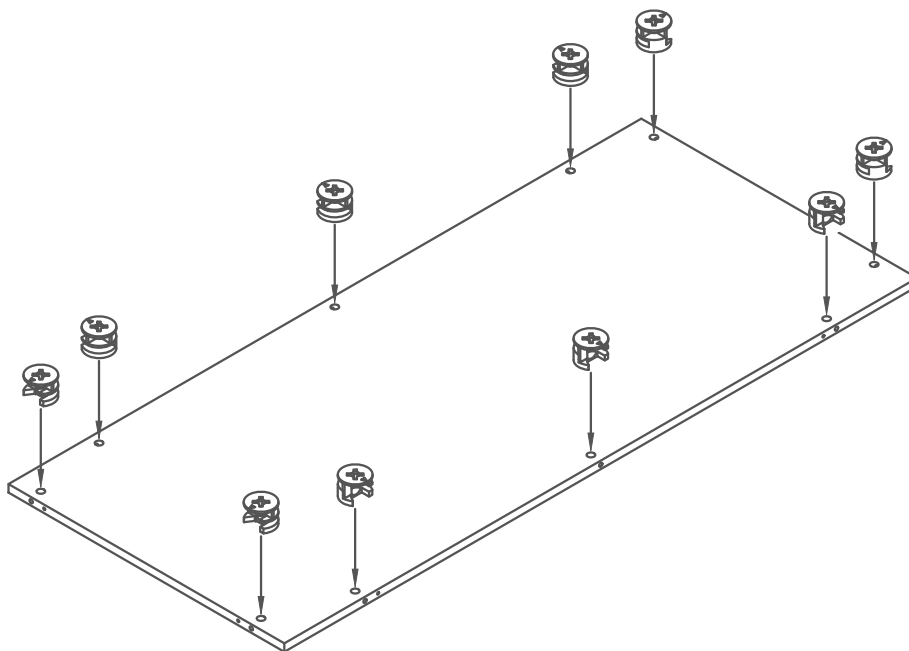


Minifix Cam RM-CAM03
x10

9

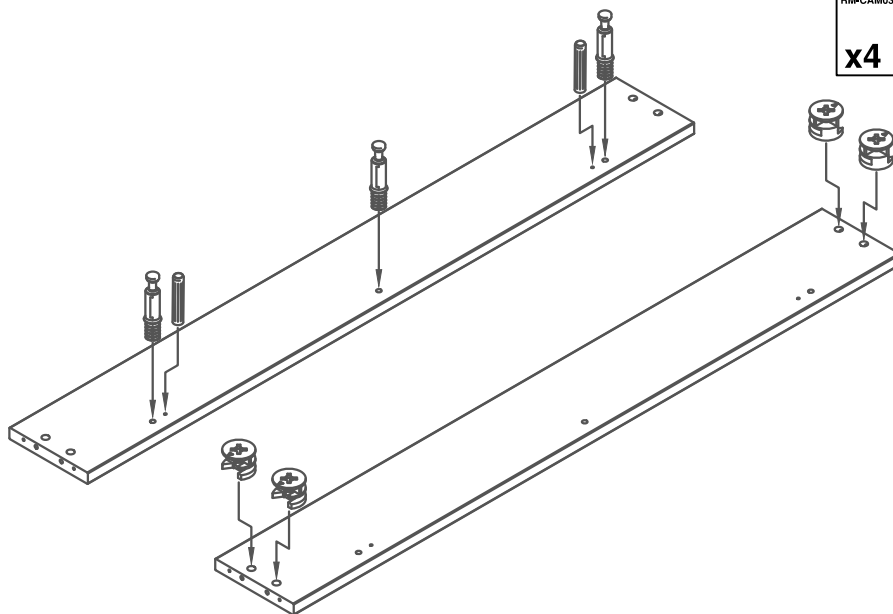


Minifix Cam RM-CAM03	24mm Quickfix Pin RM-BLT05	Wood dowel 30 x 5mm RM-WOW01
x4	x3	x2


10

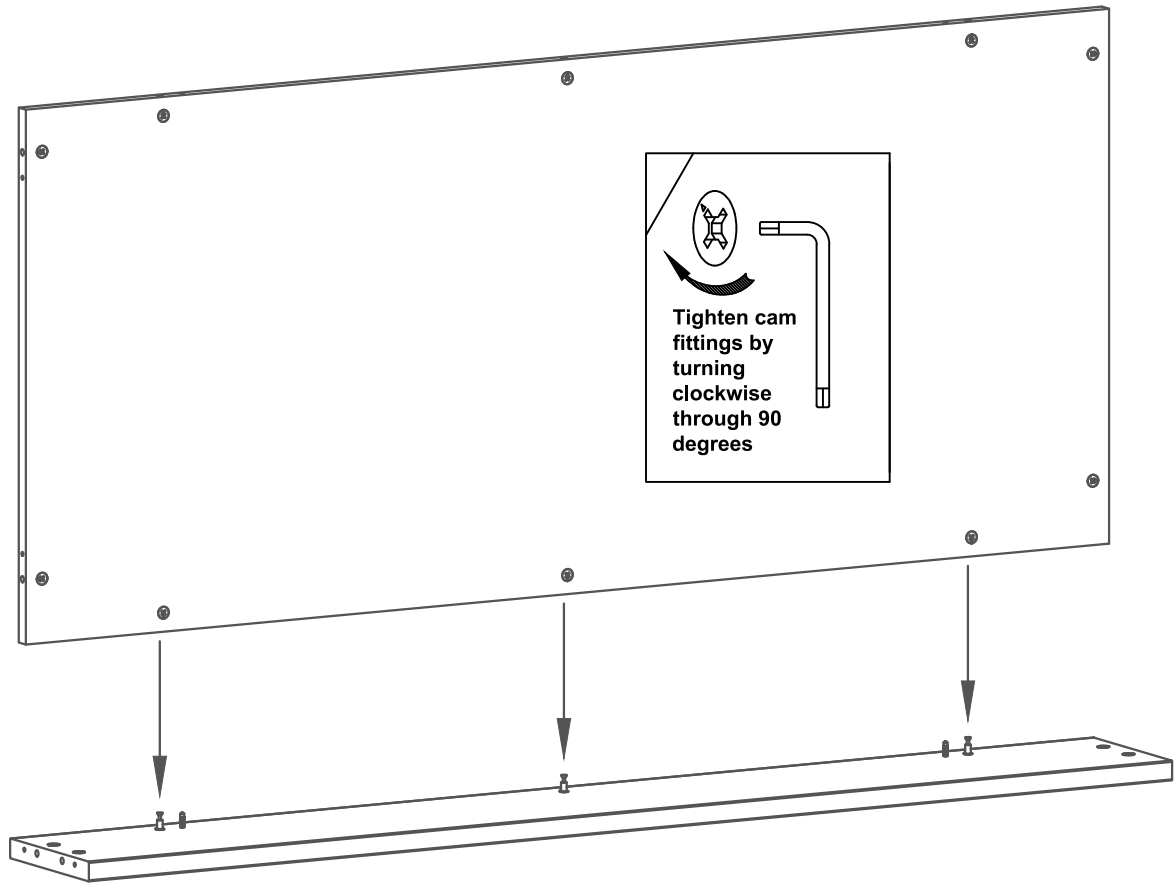


11

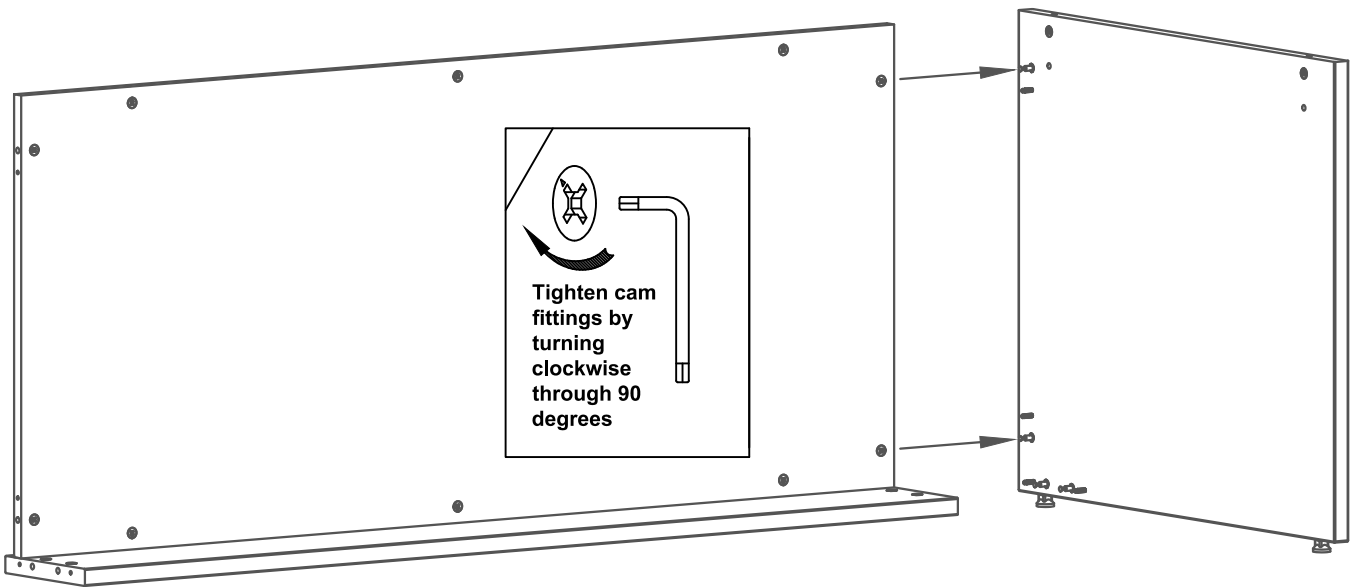

12



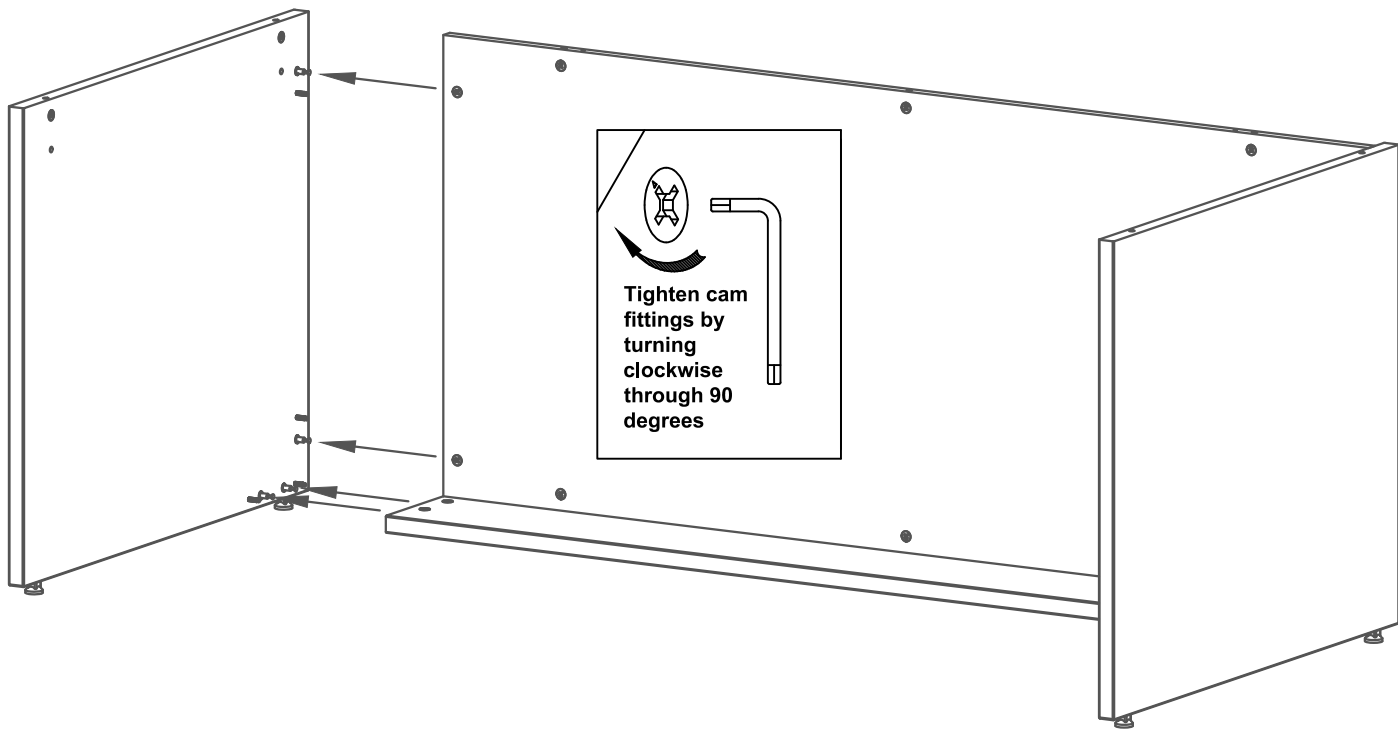


13

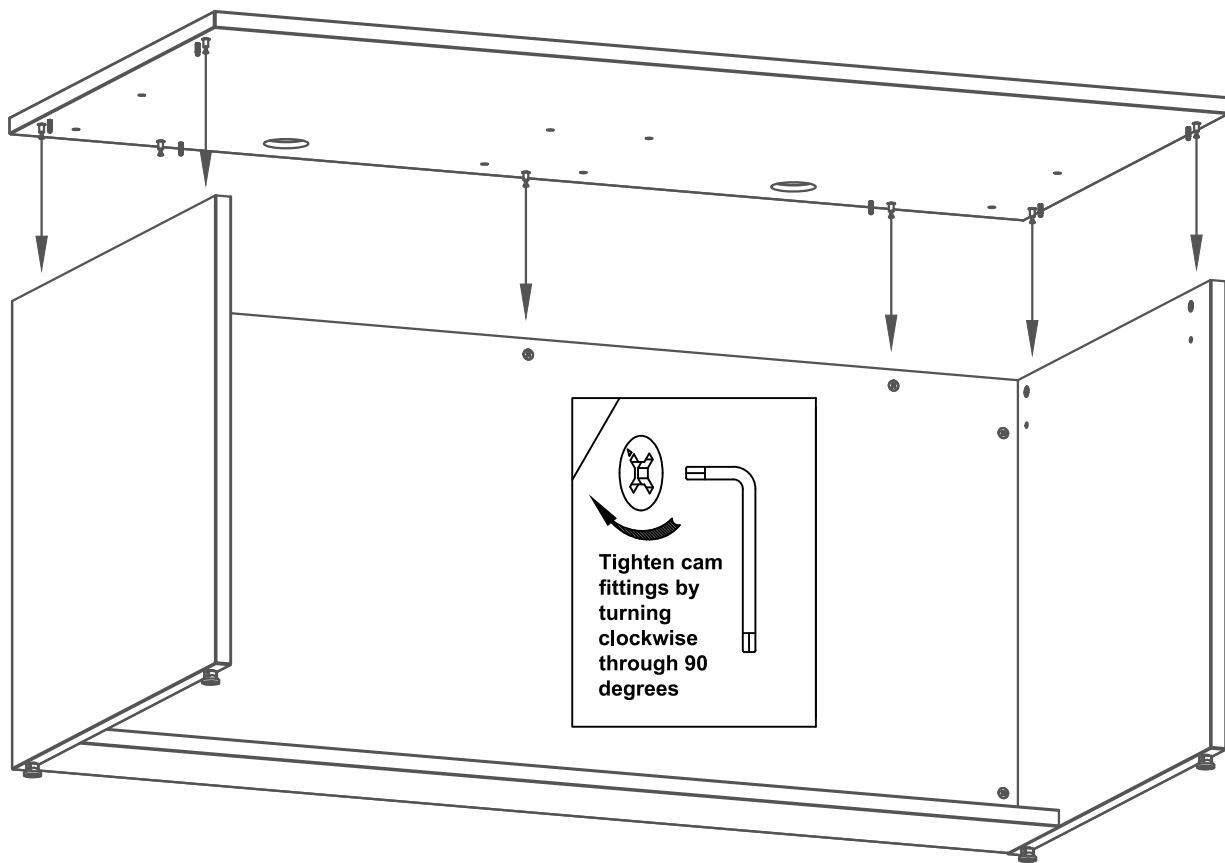




Linking units together

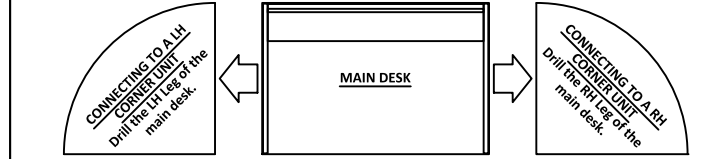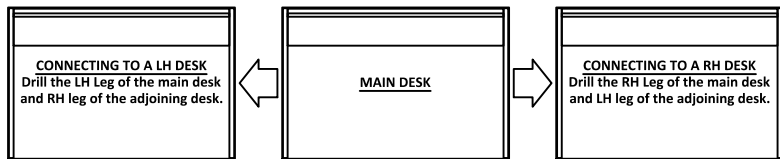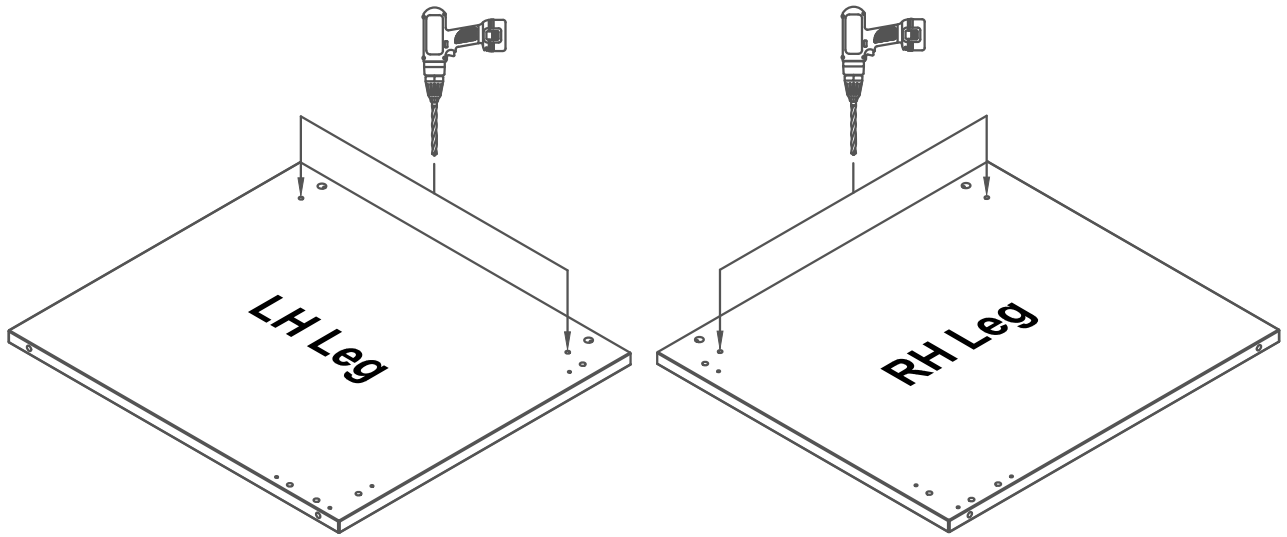

Linking desk to desk

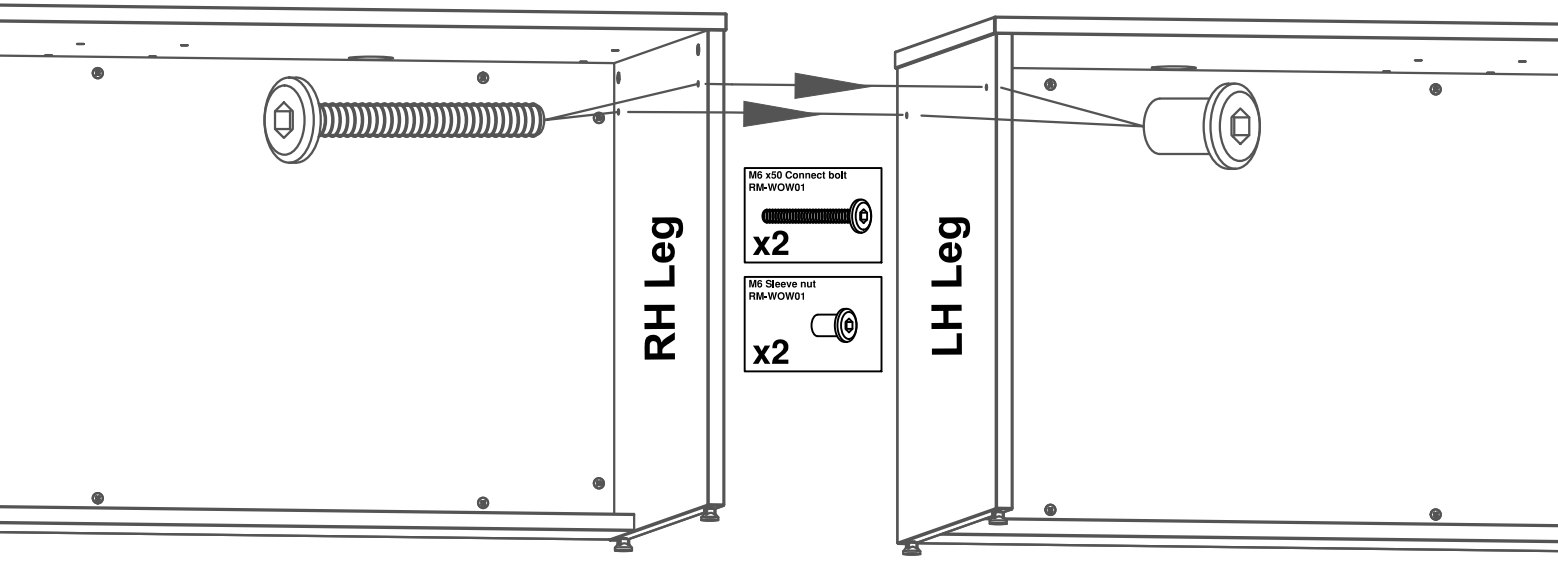

Linking desk to corner base unit

