


# Anson - Deluxe Executive Desk

## ANS-DRD




### ASSEMBLY INSTRUCTIONS


Anson  
Executive Desk &  
Return Credenza

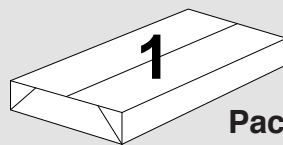


Pack 1:  
Top Pack

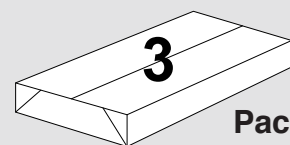


Pack 3:  
Corner Kit

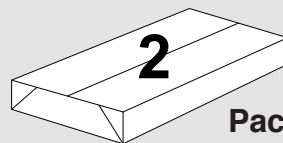


Pack 2:  
Rail Kit

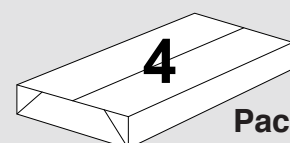


Pack 4:  
1000 Leg  
Kit

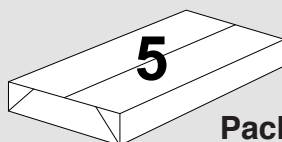

Pack 5:  
600 Leg Kit

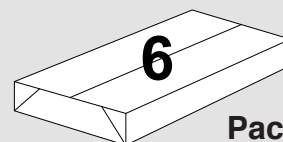


Pack 6:  
Modesty Kit


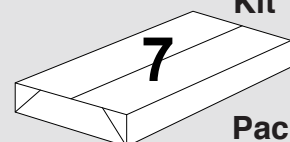


Pack 7:  
Modesty  
Pack



TOOLS REQUIRED  
FOR ASSEMBLY

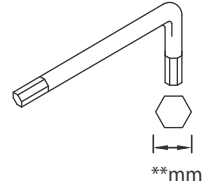


DONT STRUGGLE  
2 MAN LIFT

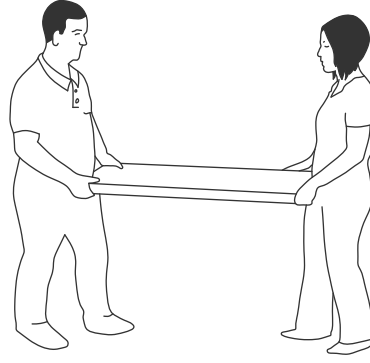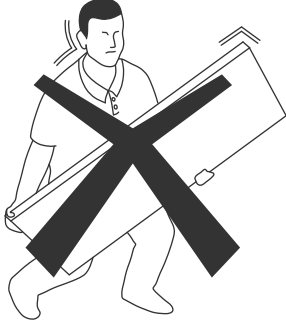


ALWAYS HANDLE  
ITEMS WITH CARE

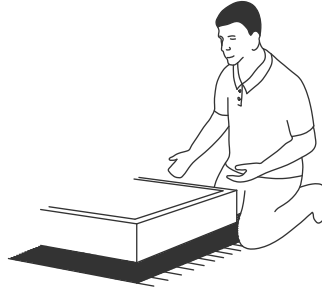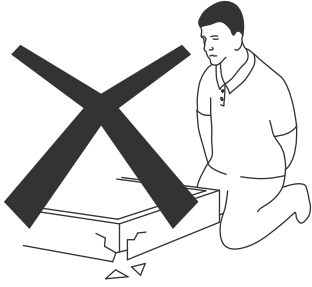

IF UNSURE CALL  
FOR ASSISTANCE

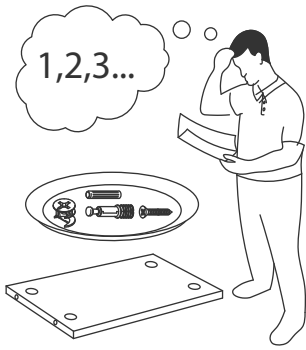


KEEP FITTINGS AWAY  
FROM CHILDREN

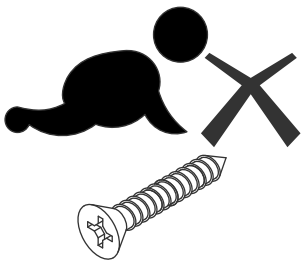




Please check that you have all the panels


**ANS-EXEC-TOP**

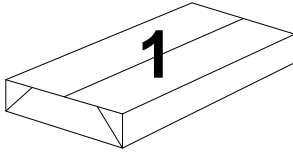

**PACK 1:**  
1 x Top Panel

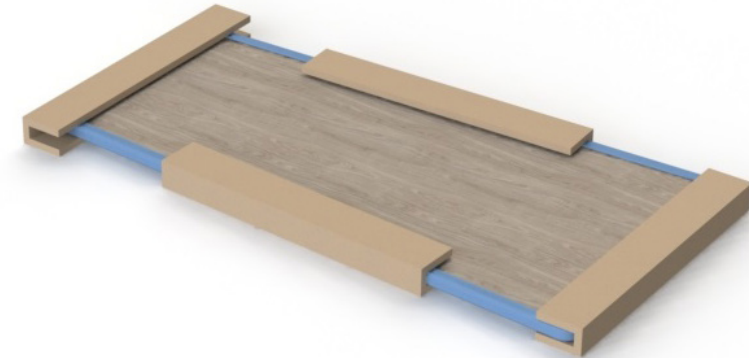


**HN-RAIL-2200**

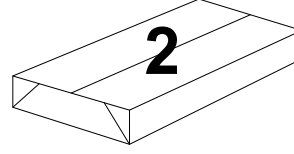

**PACK 2:**  
1 x Rail Kit




**HN-CAST**

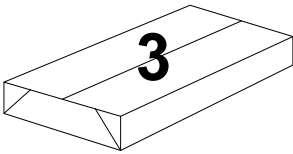

**PACK 3:**  
1 x Corner Kit




**HN-LEG10-KIT**

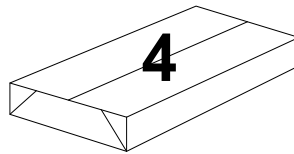


**PACK 4:**  
1 x 1000 Leg Kit




**HN-LEG6-KIT**

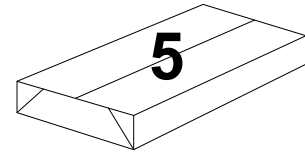


**PACK 5:**  
1 x Support Kit

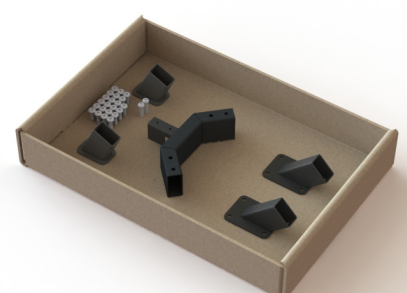


**HN-MBKT-KIT**

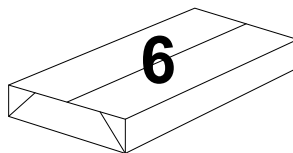


**PACK 6:**  
1 x Modesty Kit

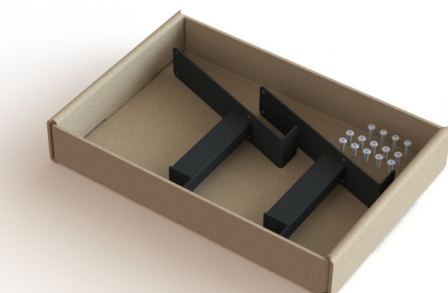

**ANS-EXEC-DMOD**

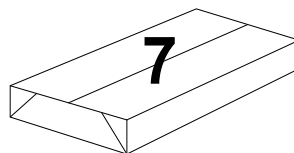

**PACK 7:**  
1 x Modesty Panel

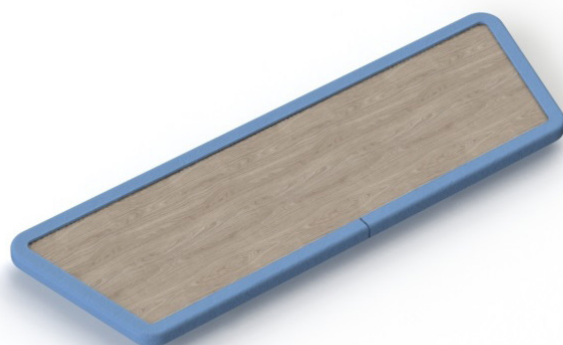



Please check that you have all the fittings


### FITTINGS SUPPLIED



M6 Connector Bolt

Size  
25mm

PCS  
58

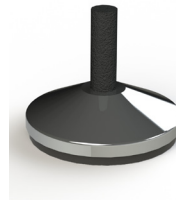

Adjustable Foot

Size  
25mm dia.

PCS  
4


# 1

## ANSON DELUXE DESK & RETURN ASSEMBLY

### Step 1

Unpack your Anson rectangular desk and please recycle all packaging.

Place the top face down so that the fixing holes are face-up.

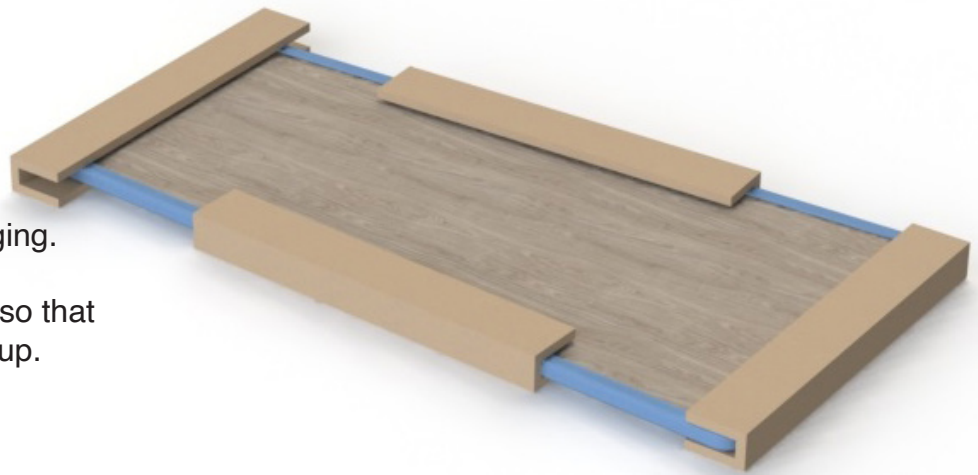

# 2


image 'a'.

image 'b'.

### Step 2

Assemble the legs as per 'image a' using parts from both leg kit & corner kit.

Link all the legs together attaching them to the side rail as per 'image b'

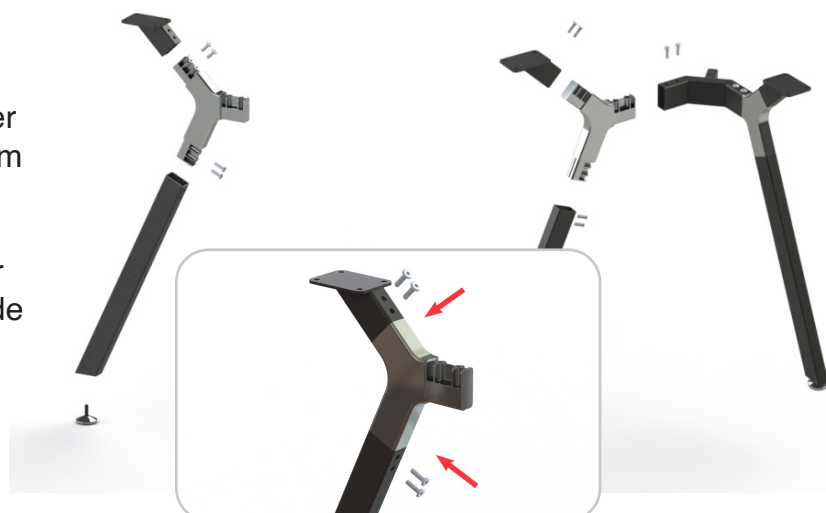

# ANSON DELUXE DESK & RETURN ASSEMBLY

## 3

### Step 3

Link both the end leg & top support together attaching them with the rail kit as per image



Ensure all fixing bolts are tightened turning in a clockwise position.



## 4

### Step 4


Once the frame is assembled place on the underside of the top and affix using the 16x M6 bolts as shown.

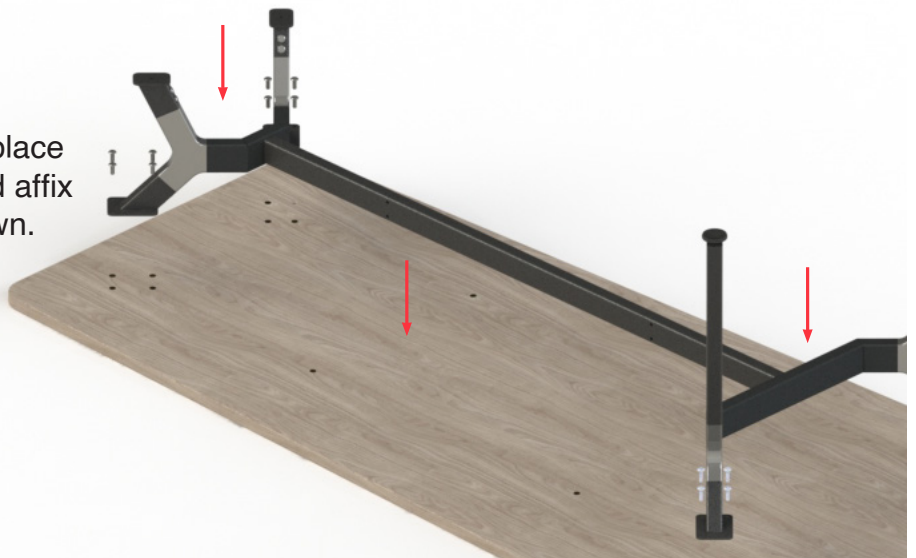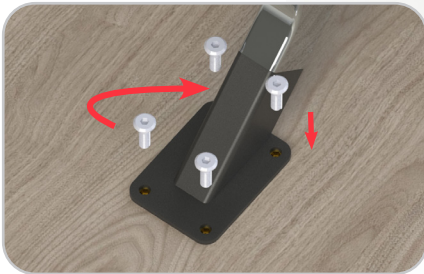

## 5

### Step 5

Attach the modesty panel fixing brackets by hooking onto the cross rail and affix using the 4x M6 bolts as shown.

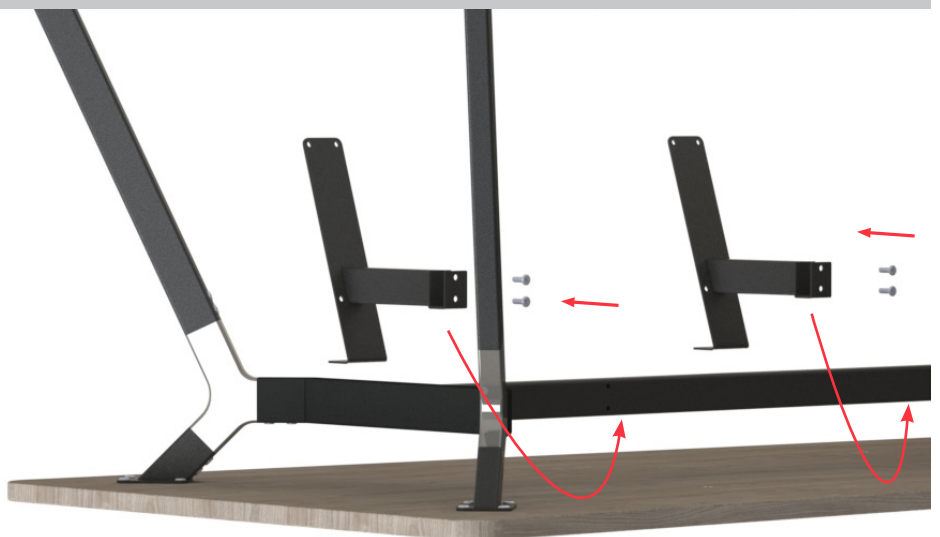


# ANSON DELUXE DESK & RETURN ASSEMBLY

## 6

### Step 6


Fix the modesty brackets to the underside of the top and affix using the 2x M6 bolts as shown.

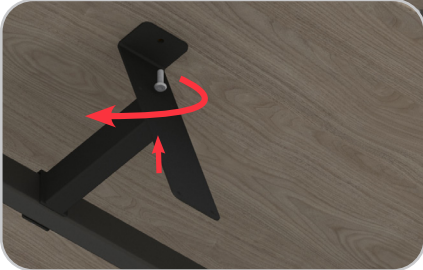

## 7

### Step 7

Align the modesty panel to the modesty panel brackets and affix using the 8x M6 bolts as shown.

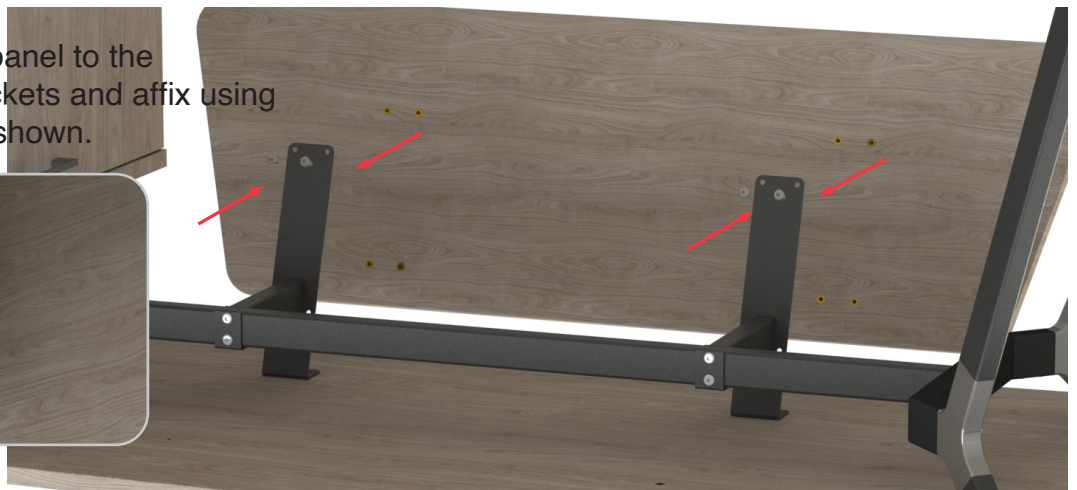

## 8

### Step 8

Un-pack and place the return credenza unit into location, drill through the 2x holes located on the underside of the top panel as shown either:

R = Right handed  
L = Left handed



# ANSON DELUXE DESK & RETURN ASSEMBLY

## 9

### Step 9


With 2x person(s) lift and turnover the desk into it's upright position and place on the top of the credenza.



## 10

### Step 10

Align the support end with the desired holes located on the underside of the top and affix using the 2x M6 bolts provided.

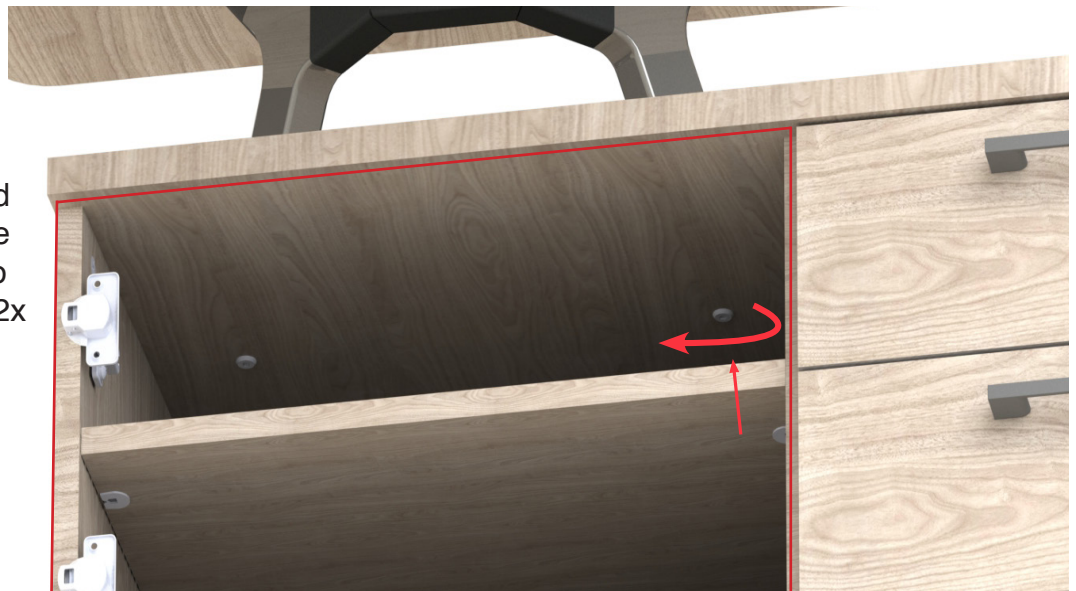

## 11

### Step 11

Once complete ensure all fixings bolts are tightened.

