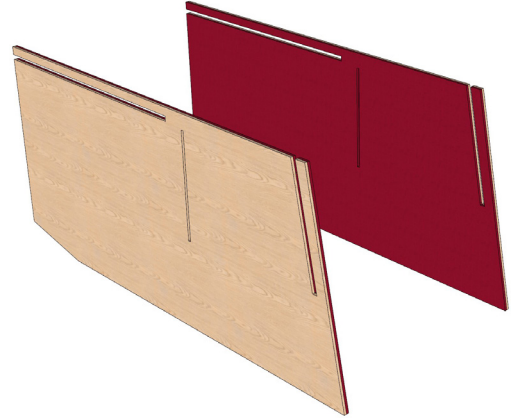
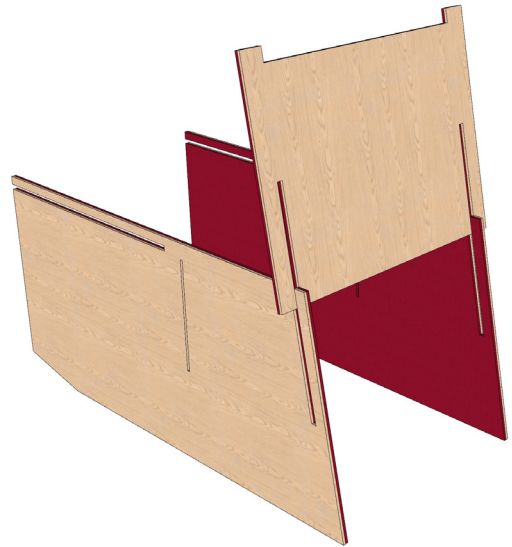


1


Step 1:
Position both sides parallel with acoustic material facing each other.

**2**

Step 2:
Slide the top panel down either side of the sides making sure the acoustic material side is facing to the centre of the panels.



**3**

Step 3:
Slide the back panel parallel with the floor. Make sure that the acoustic material side is facing the floor when sliding it into position.

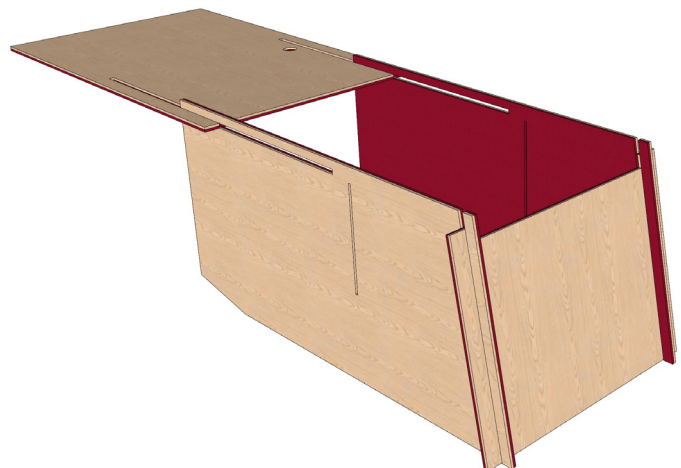


4

Step 4:
Rotate unit in the upright position with
the chamfered edge sit on the floor.
This is a **2 person** lift.

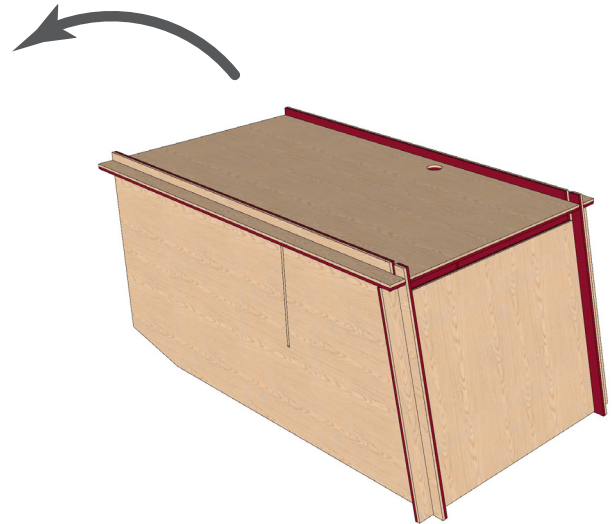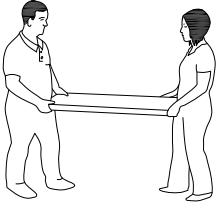

5

Step 5:
Slide the desktop through the slots on the
side of each panel making sure that the
recessed cable management slot is facing
the back panel. Push all the way through
till the rebated section meets the outside
face of the side panel.

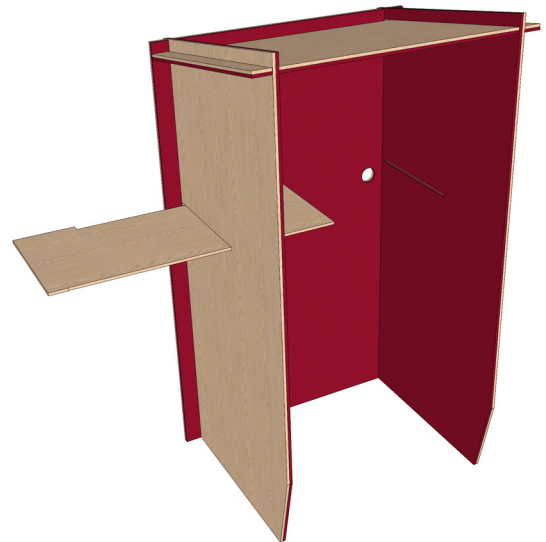

6

Step 6:
Position unit to desired place.

