



1

Step 1:
Insert one of the long side pieces into the end section of the lattice at an angle.

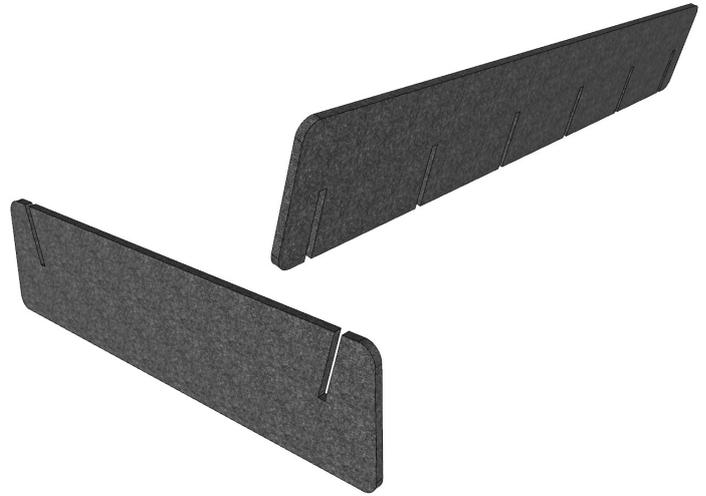

2

Step 2:
Slide the second side piece into place parallel to the first.

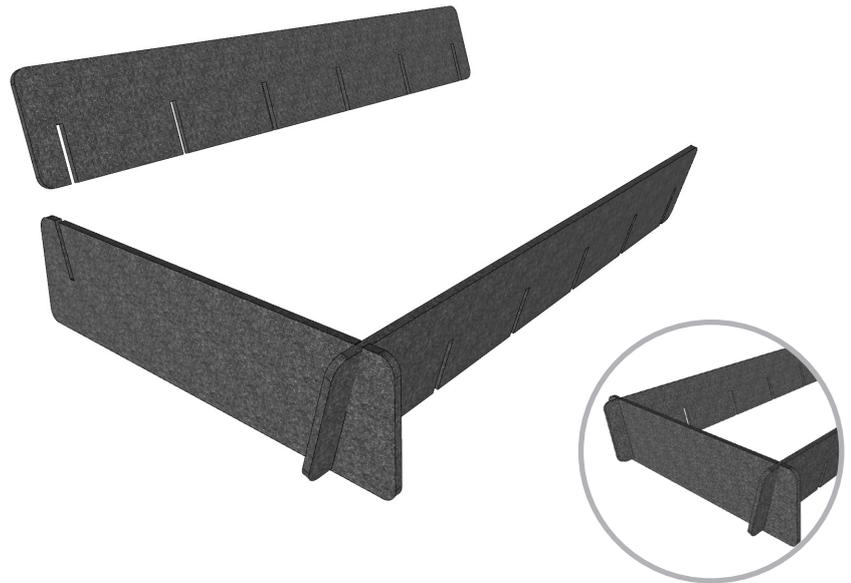

3

Step 3:
Slide the short panels into the cut-outs on the bottom of the long acoustic panels. Repeat this process until all panels are in and secure.

