

(1)X1


(B)x4

MODEL: GREENWICH B689

(3)X1 (L)X1 (R)

(4)X2		
Please unscrew all screws from cushion before assembly.		
(A)x4 () M6*36		

(2)X1

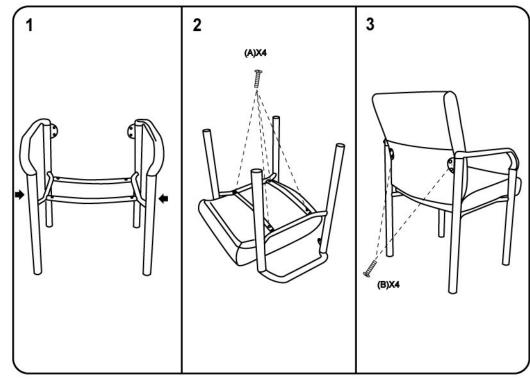

It is important to assemble all parts so that the directional "Arrows" point in the same direction. Make certain that all screws are FULLY tightened before using the chair. Each month, check all screws and tighten any that may have loosened.



62BEACONSFIELD STREET BEDFORD M K41 7SD TEL:01234 328804 FAX:01234 342446

If you encounter any problems with the operation of your chair, please refer to the downloads section of our web site - www.teknikoffice.co.uk

M6*22