



⚠ DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS  
- TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED

## FLEX Headrest

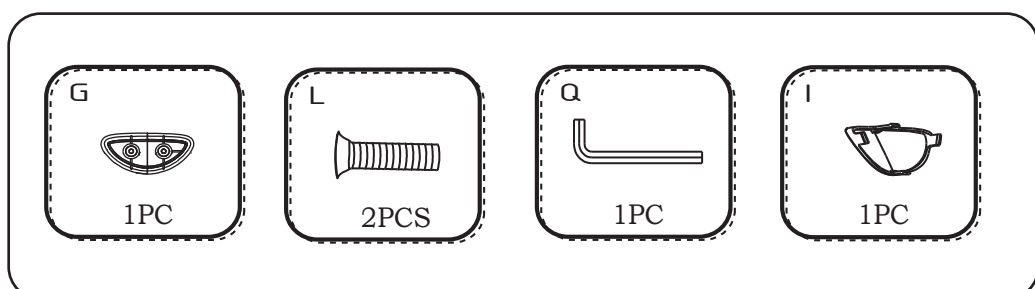

⚠ DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS  
- TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED

- Ⓒ Please note bolts are located in their fixing positions
- Ⓕ Veuillez noter que les boulons sont situés dans leur position de fixation
- Ⓘ Verificare che I bulloni siano posizionati nelle relative posizioni di fissaggio
- Ⓓ Hinweis:Die Bolzen befinden sich in ihren Befestigungspositionen
- Ⓔ Por favor, observe que los pernos se sit an en sus posiciones de ajuste
- Ⓗ Note que os parafusos esto posicionados nas suas posi es de fiza o
- Ⓝ Let op: bouten zijn op de bevestigingspunten aangebracht

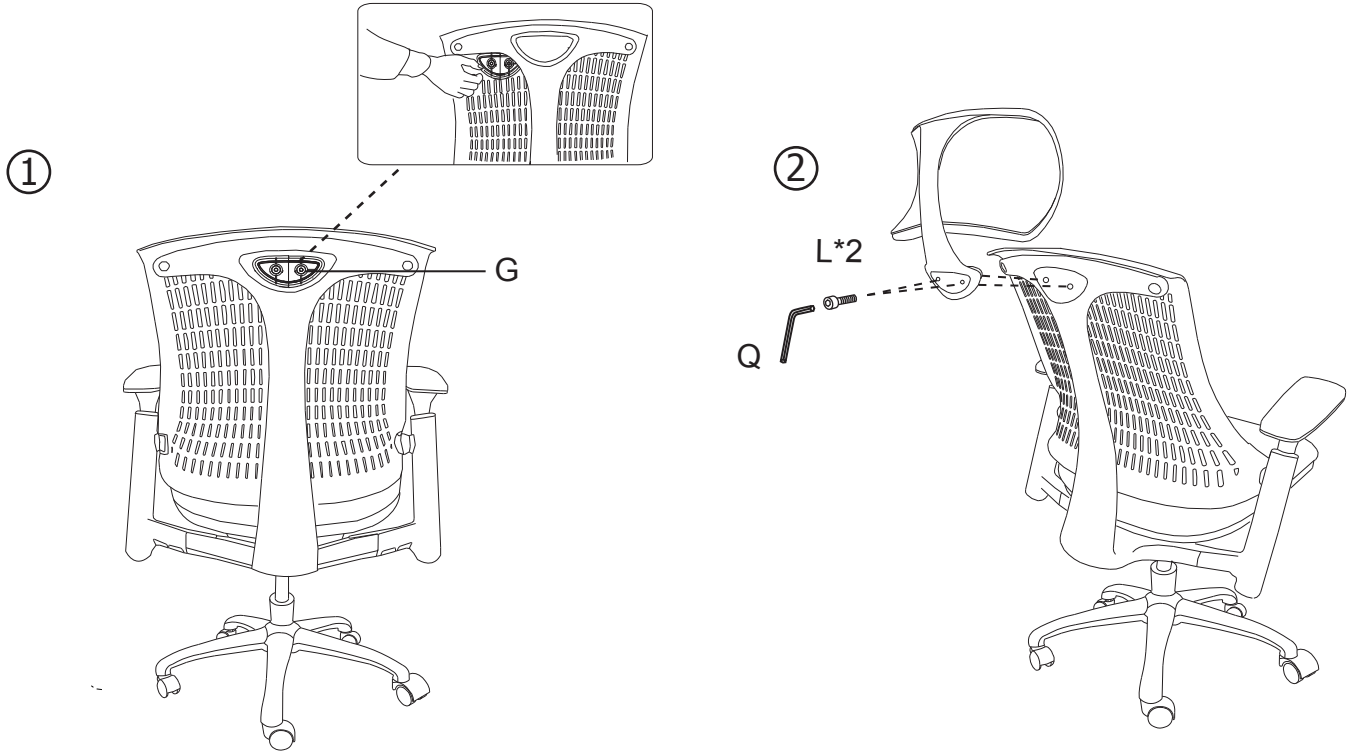

Place the plastic G under the hole as the illustrated



Place cap over bolt as illustrated and press firmly

**IMPORTANT!** Do not tighten bolts fully until you have completed assembly  
**IMPORTANT!** Ne serrez pas complètement les boulons avant d'avoir terminé le montage  
**IMPORTANTE!** Non serrate completamente le viti finché non avrete completato il montaggio.  
**WICHTIG!** Schrauben erst nach vollständiger Montage fest anziehen.  
**IMPORTANTE!** No apriete en su totalidad los pernos hasta no haber completado el montaje.  
**BELANGRIJK!** Draai de bouten niet helemaal vast voordat u de stoel volledig in elkaar hebt gezet.