

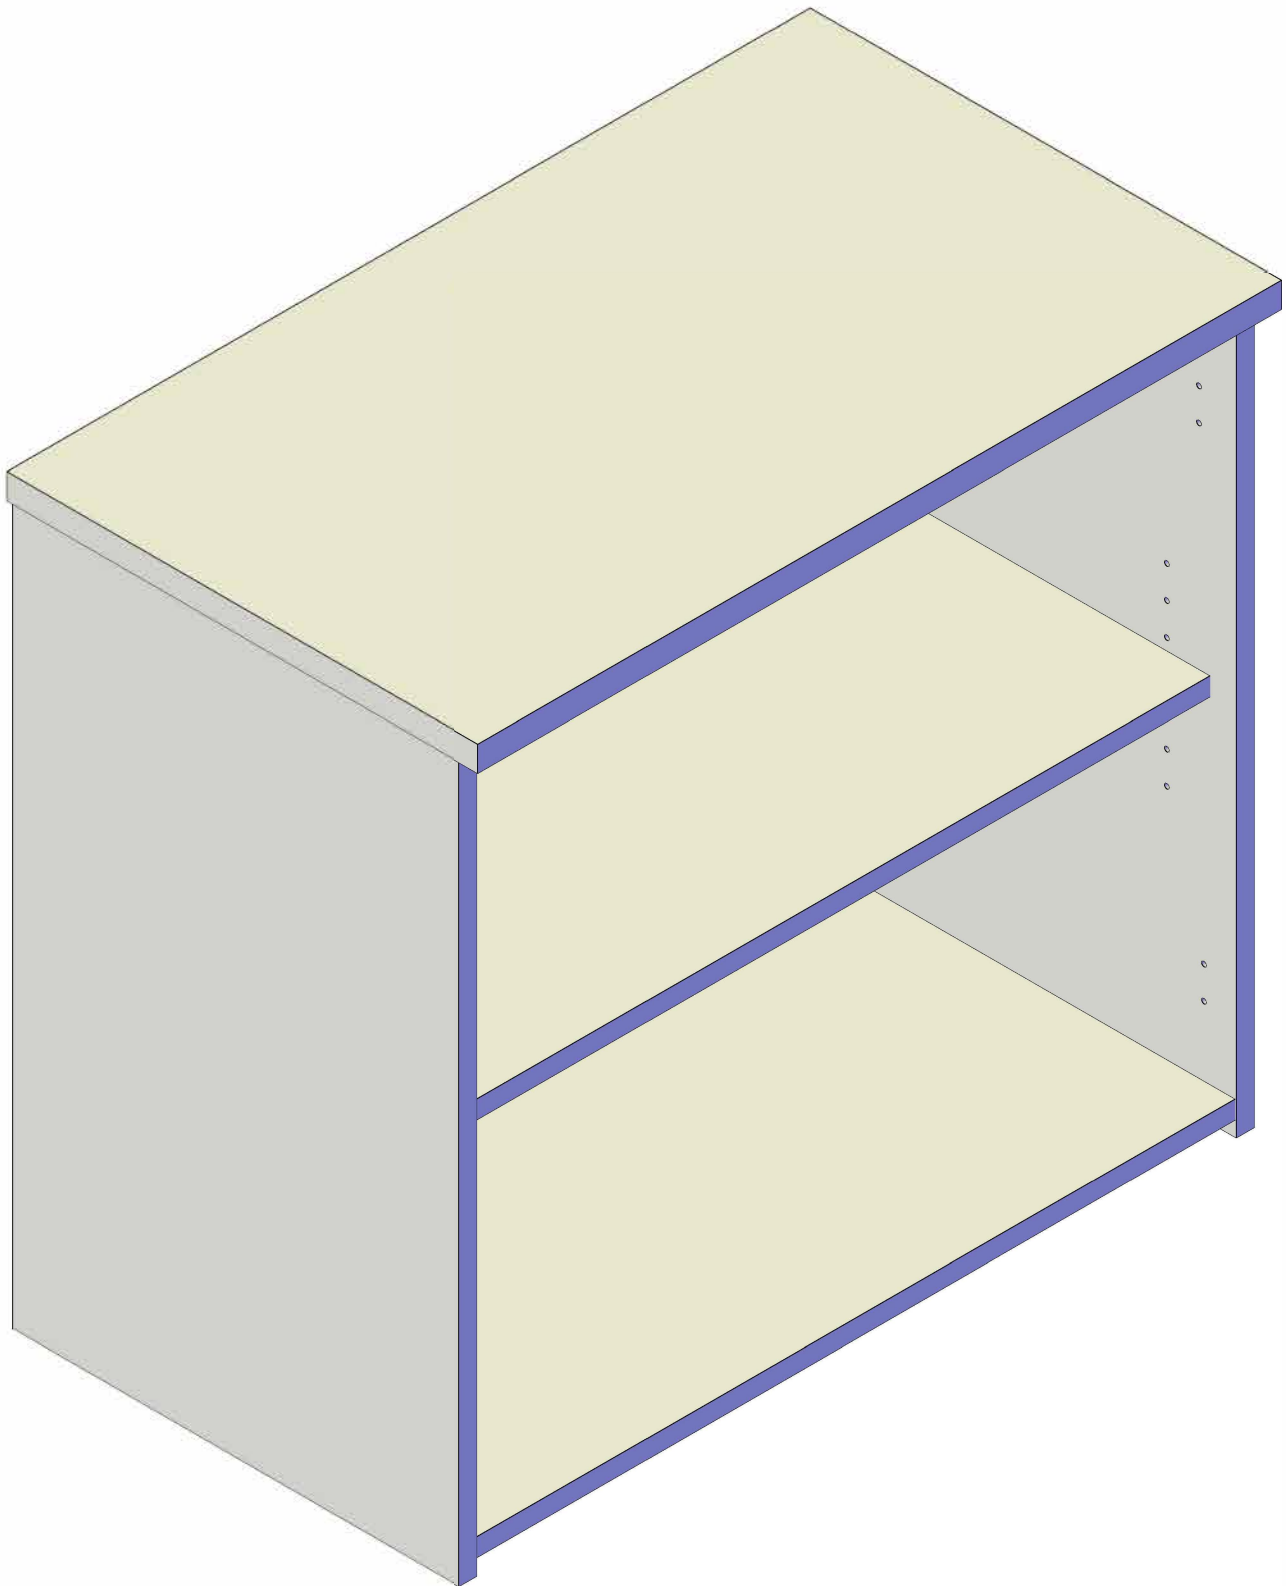


R740



800 x 470 x 740mm Bookcase

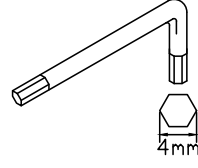



**TOOLS REQUIRED
FOR ASSEMBLY**

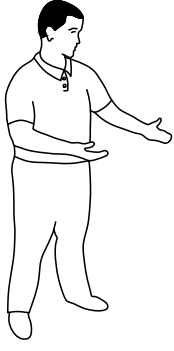


**DONT STRUGGLE
2 MAN LIFT**

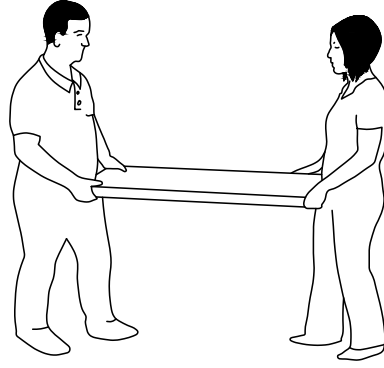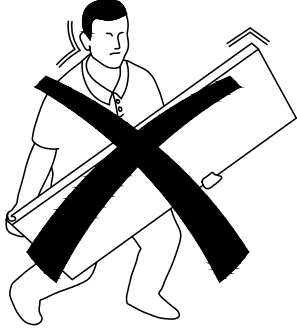



**ALWAYS HANDLE
ITEMS WITH CARE**

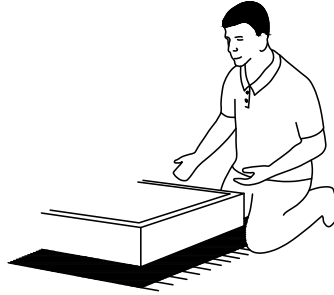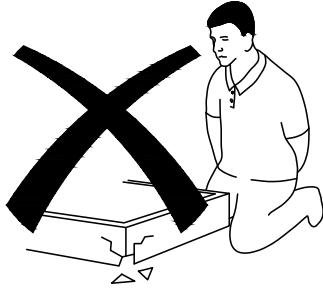

**IF UNSURE CALL
FOR ASSISTANCE**





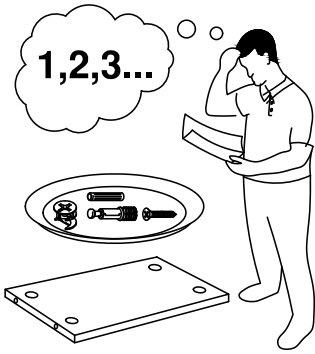


**KEEP FITTINGS AWAY
FROM CHILDREN**

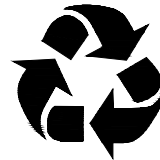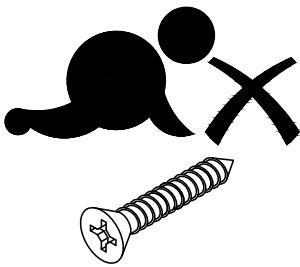



Please check that you have all the panels!

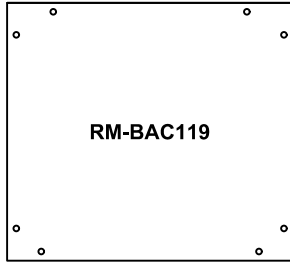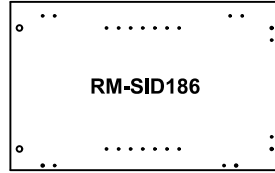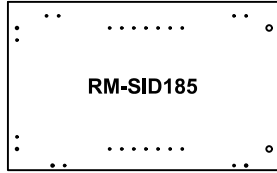

Please check that you have all the fittings!

(Fittings Bags Supplied in Carton 2 - SS-740S)



16	Cam 15N CAM03		16	24mm Quick fix pin BLT07	
	4	Shelf clip PAR07			12










20	17mm Cover Caps CAP07	
-----------	--------------------------	--

1



Prepare the panels by inserting the listed fittings into the corresponding holes.

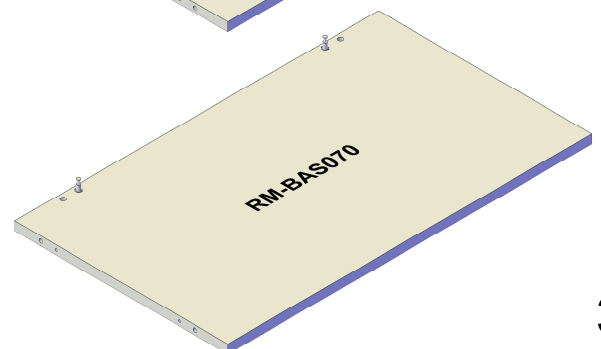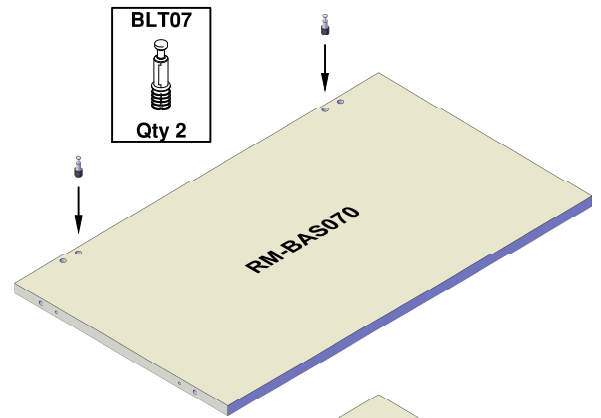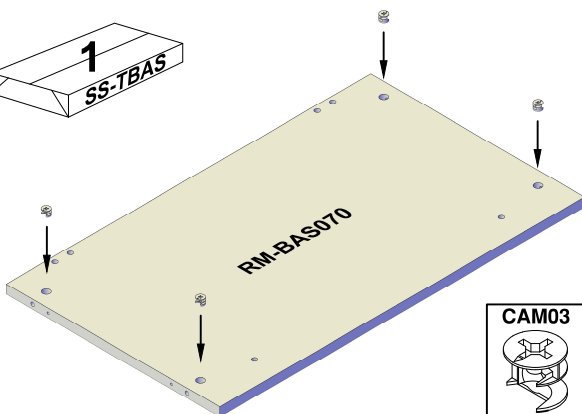

Insert the cam fittings first before turning the panel over to insert the quick fix pins.





Prepare all the panels by inserting the listed fittings into the corresponding holes.

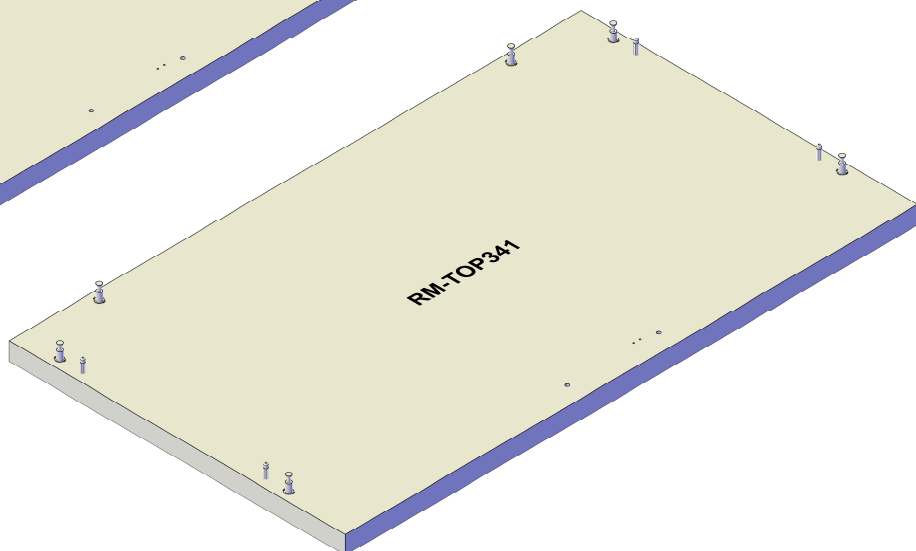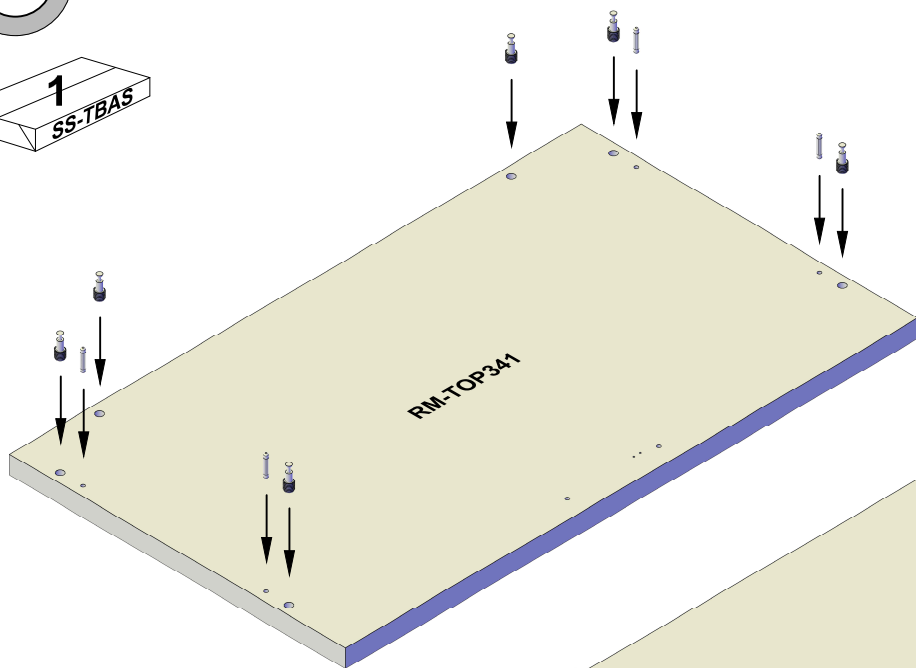
2



BLT07	WOW01
	
Qty 6	Qty 4

3

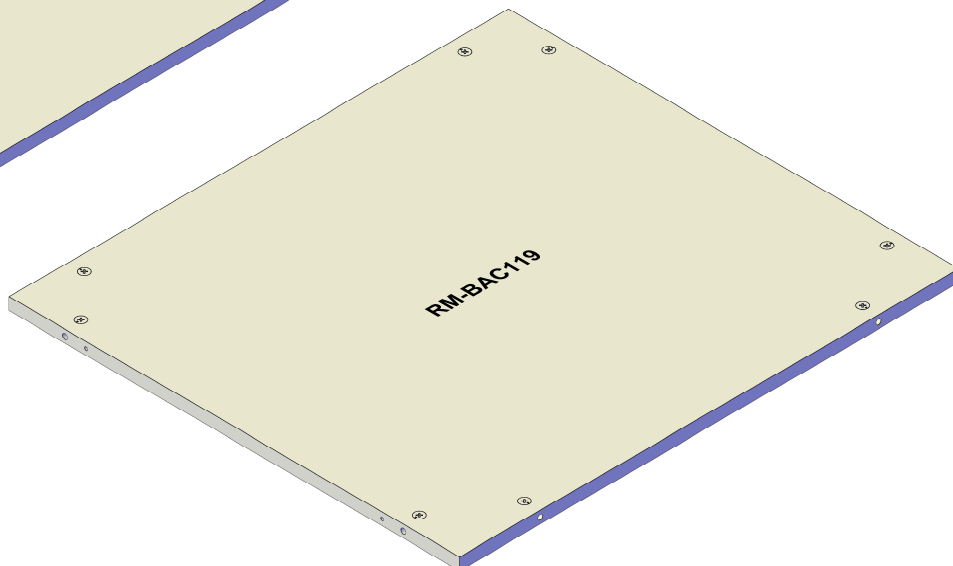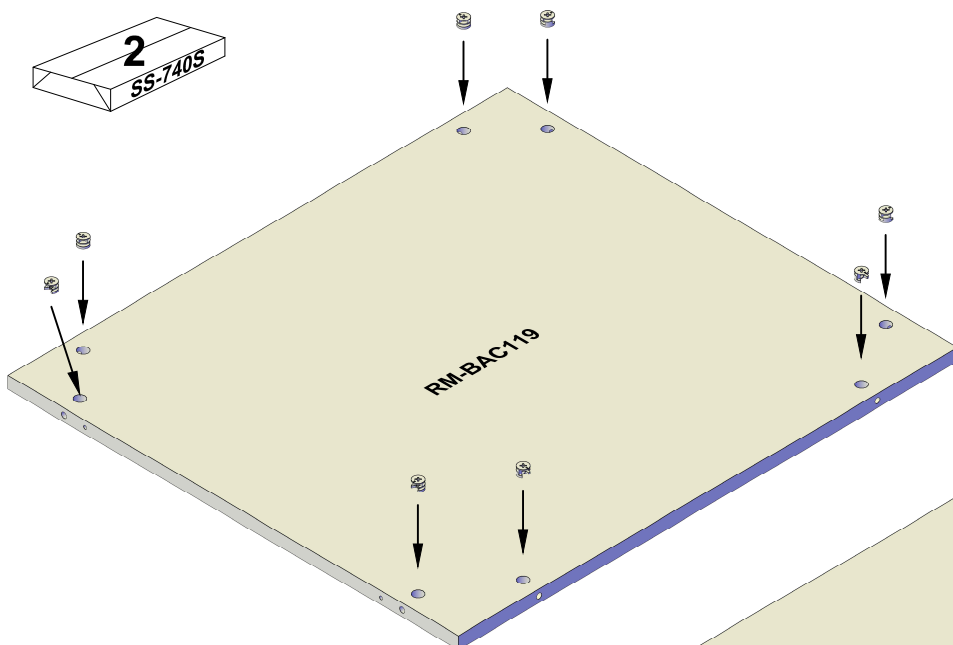





CAM03

Qty 8


4

Prepare all the panels by inserting the listed fittings into the corresponding holes.

4





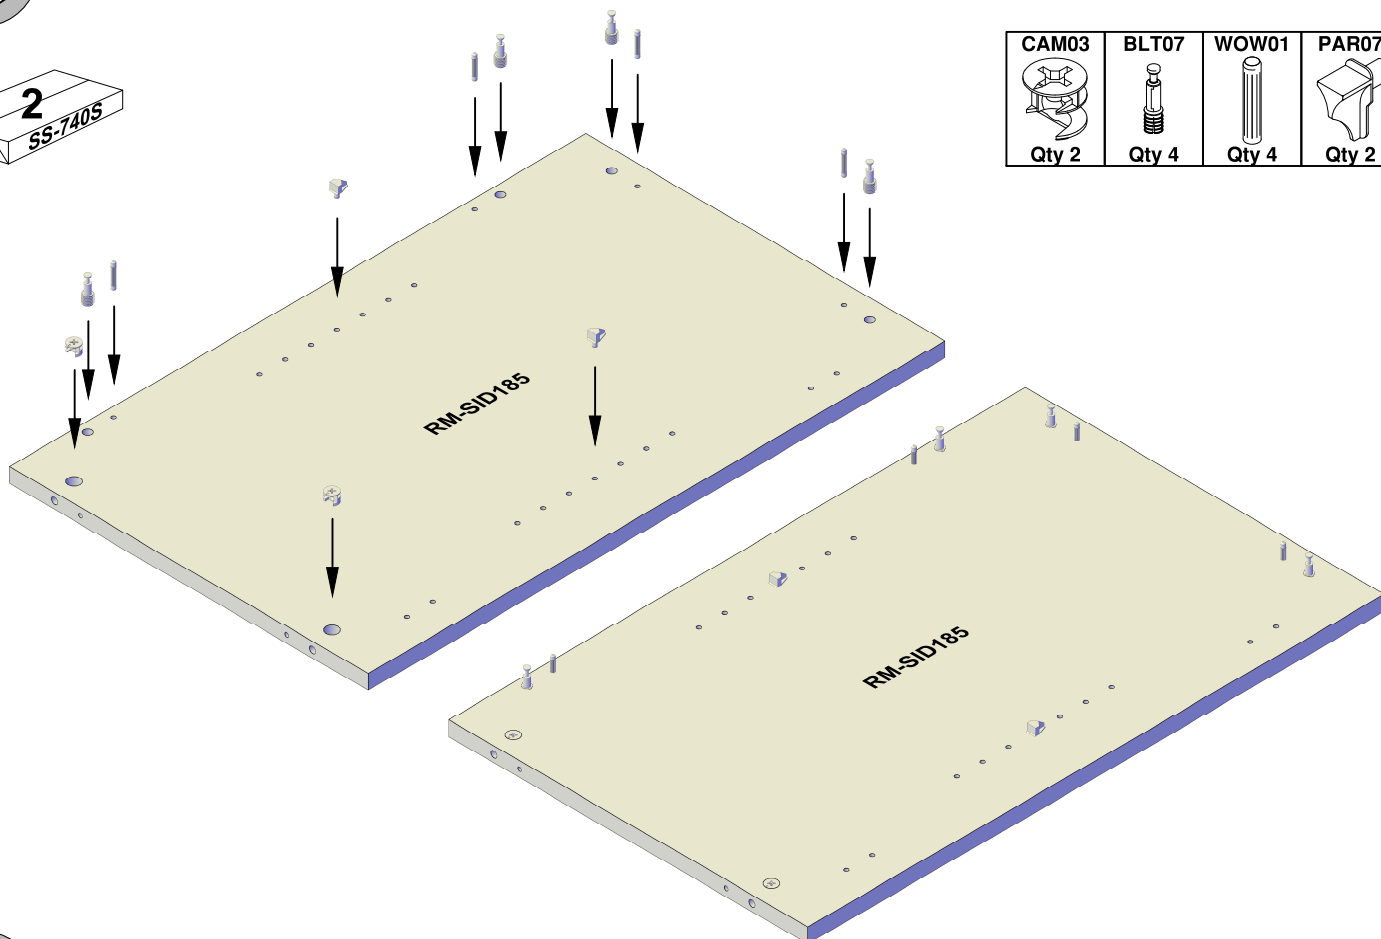


CAM03  Qty 2	BLT07  Qty 4	WOW01  Qty 4	PAR07  Qty 2
--	--	--	--



5





CAM03  Qty 2	BLT07  Qty 4	WOW01  Qty 4	PAR07  Qty 2
--	--	--	--



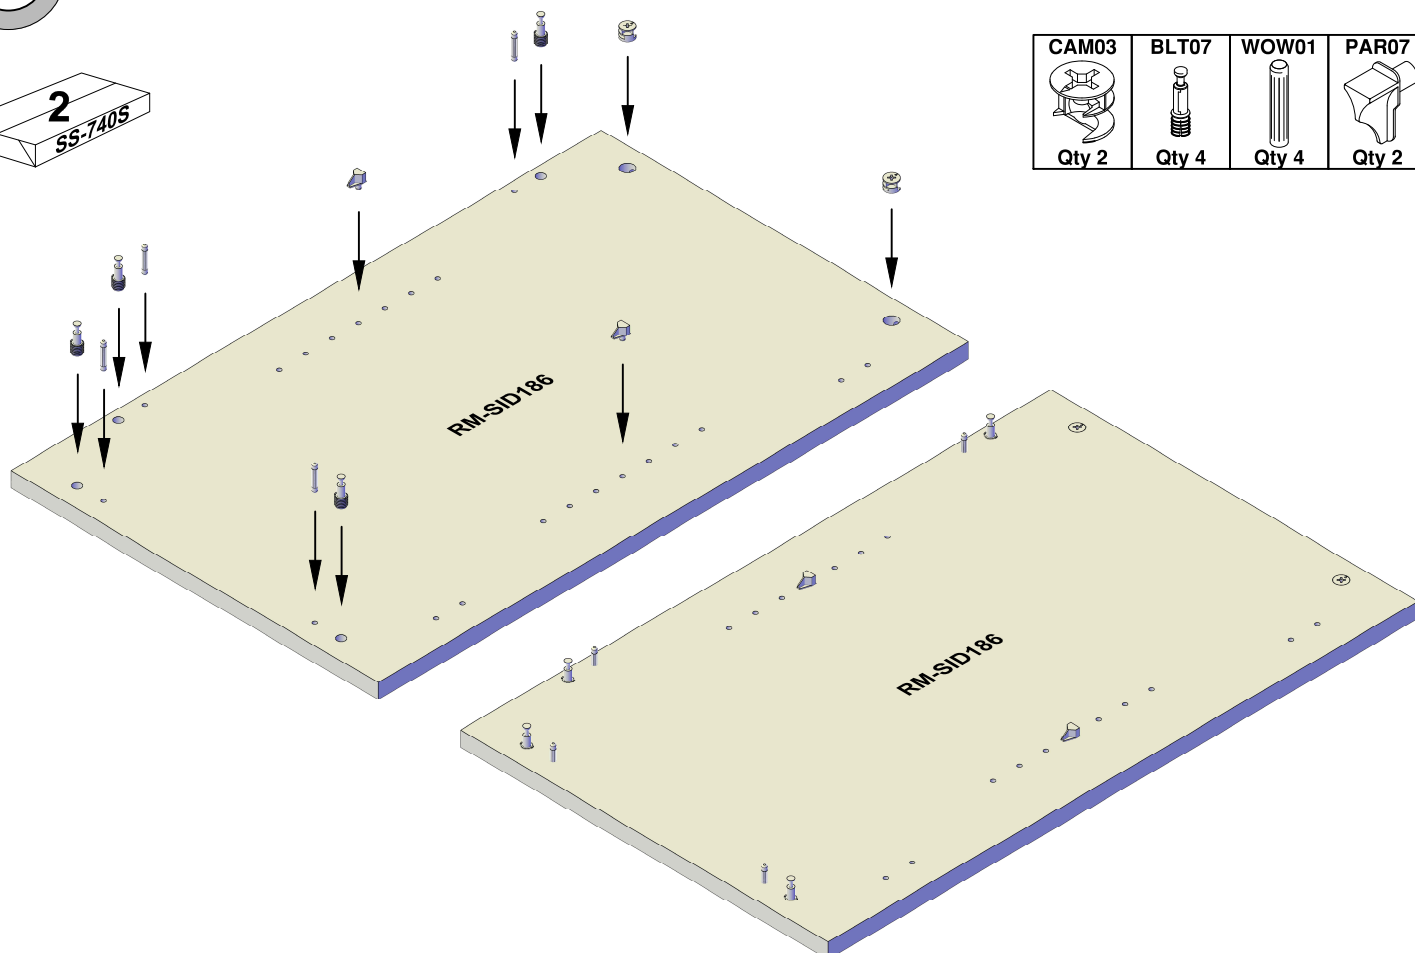


Join the panels together and tighten all cam fittings

6


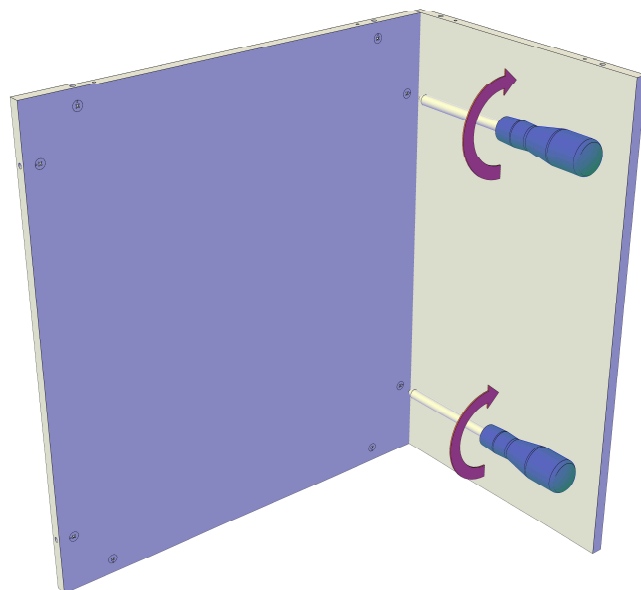
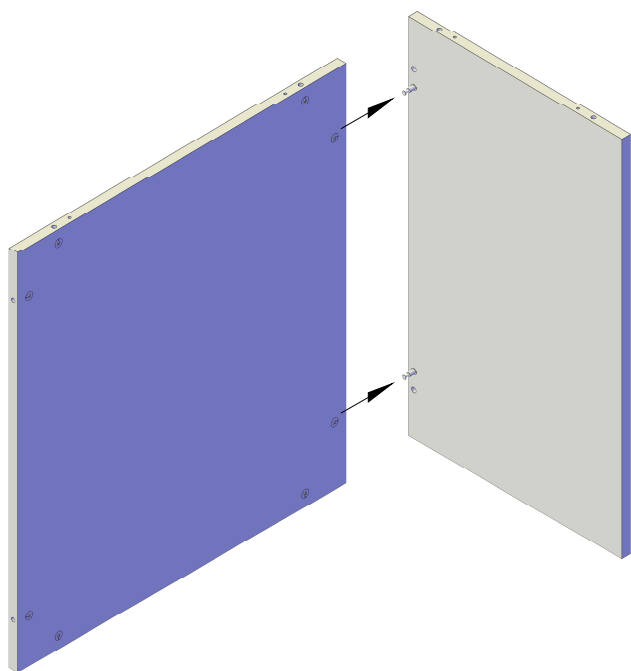


7

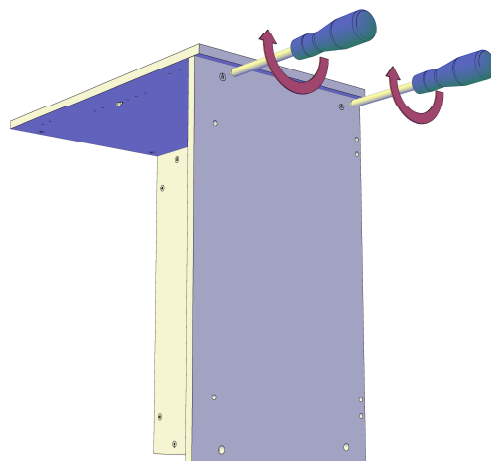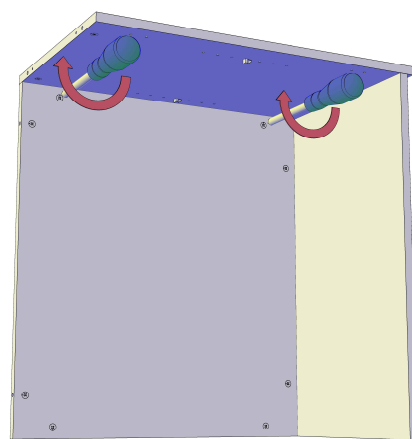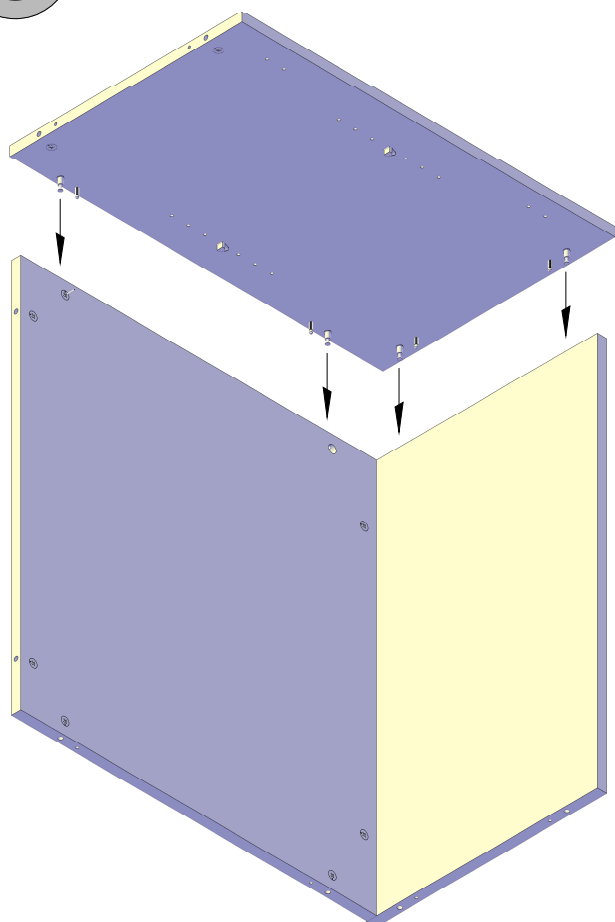

Join the panels together and tighten all cam fittings

8

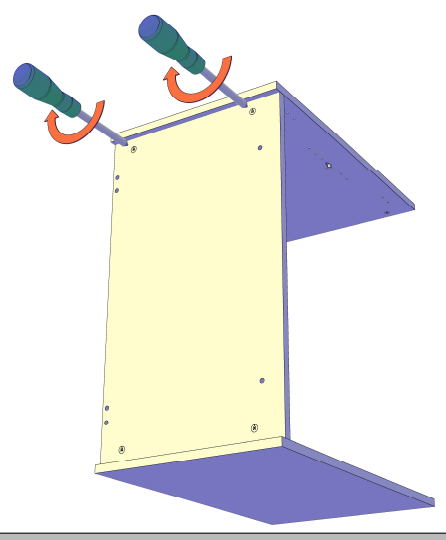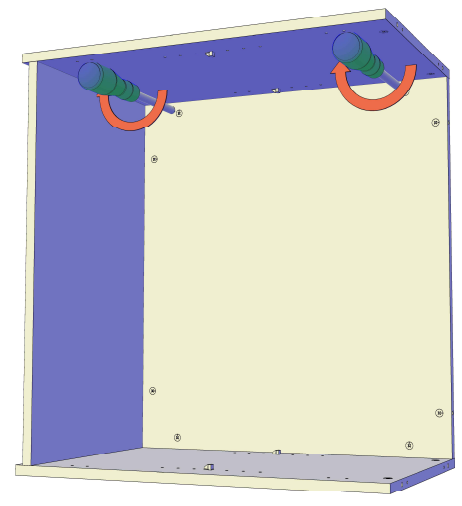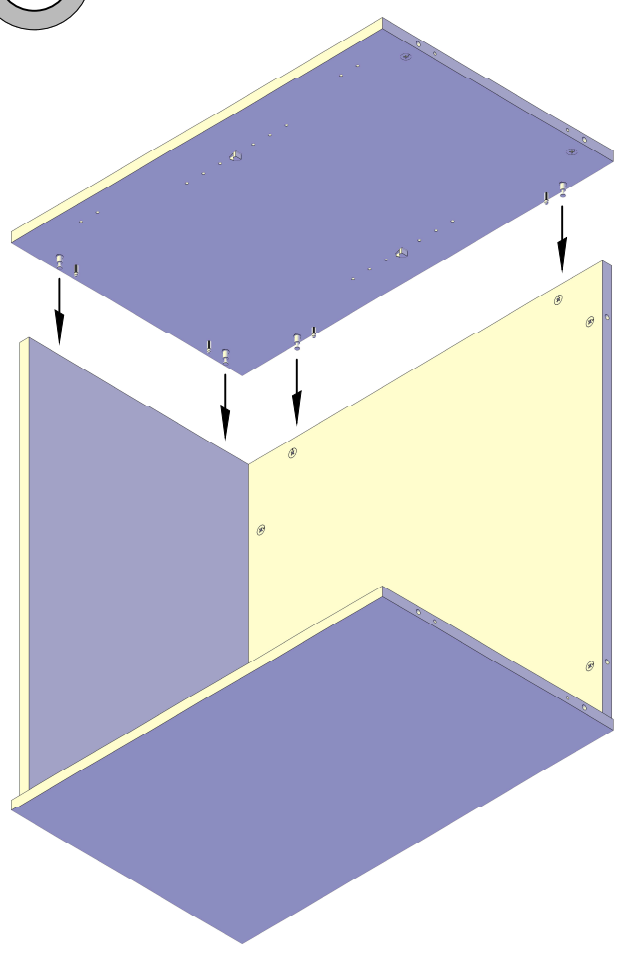

9

