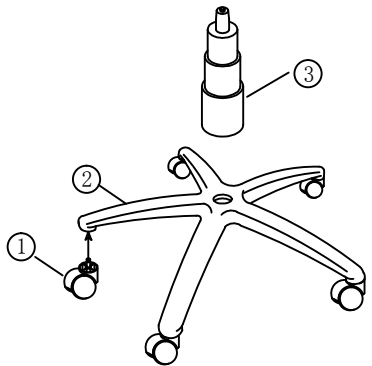
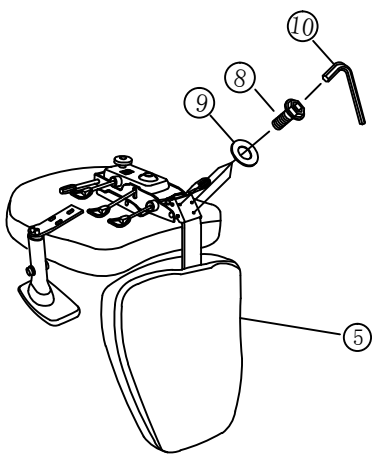

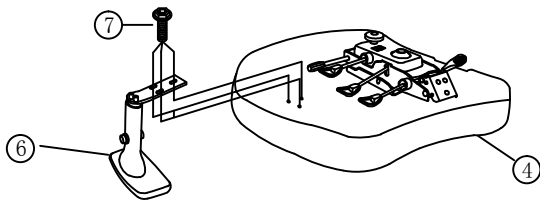
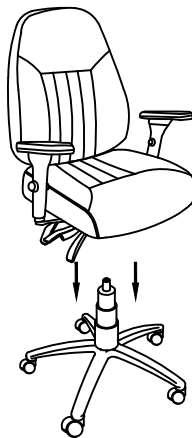












Barcelona Deluxe ASSEMBLY INSTRUCTION

<p>1</p> 	<p>3</p> 	<p>5</p> 							
<p>2</p> 	<p>4</p> 								
<p>① CASTOR</p>	<p>② 5-STAR BASE</p>	<p>③ GAS LIFT</p>	<p>④ SEAT CUSHION WITH MECHANISM</p>	<p>⑤ BACK CUSHION</p>	<p>⑥ ARMREST</p>	<p>⑦ SCREW M8*30</p>	<p>⑧ SCREW M8*20</p>	<p>⑨ WASHER Ø20×Ø8.5×2MMT</p>	<p>⑩ ALLEN KEY</p>
									
<p>5 PCS</p>	<p>1 PC</p>	<p>1 PC</p>	<p>1 PC</p>	<p>1 PC</p>	<p>1 PAIR</p>	<p>6 PCS</p>	<p>3 PCS</p>	<p>3 PCS</p>	<p>1 PC</p>

IMPORTANT NOTE - PLEASE ASSES ALL COMPONENTS PRIOR TO DISPOSAL OF PACKAGING AND ASSEMBLY OF CHAIR