




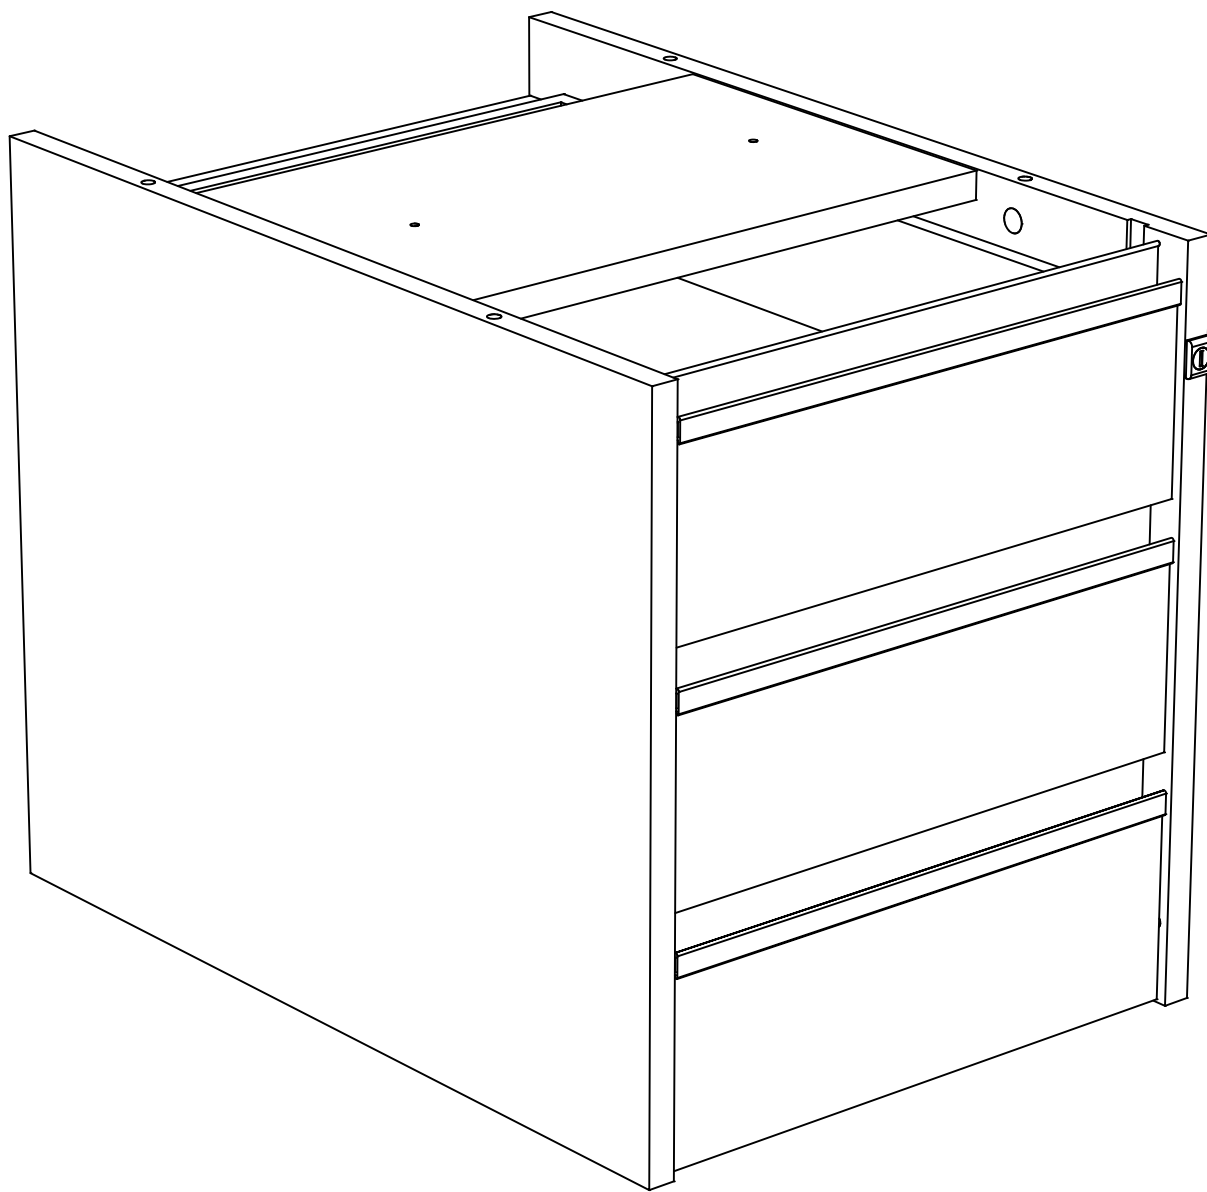
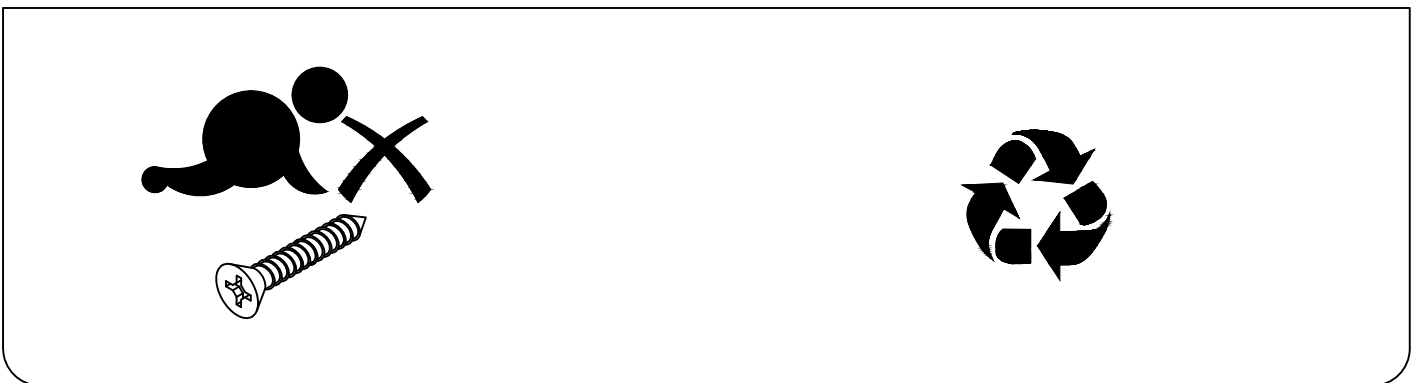


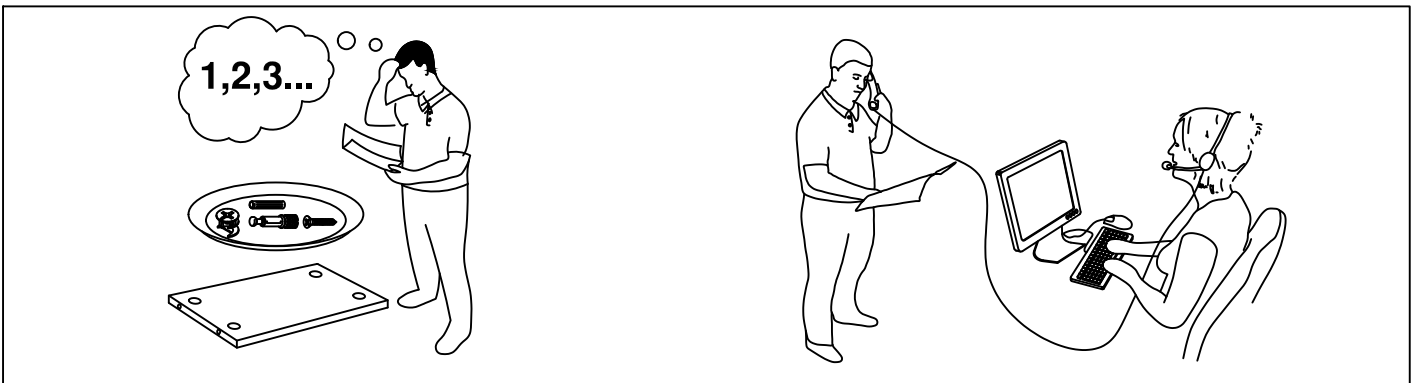

# CF3FP - 3 Drw Desk Pedestal




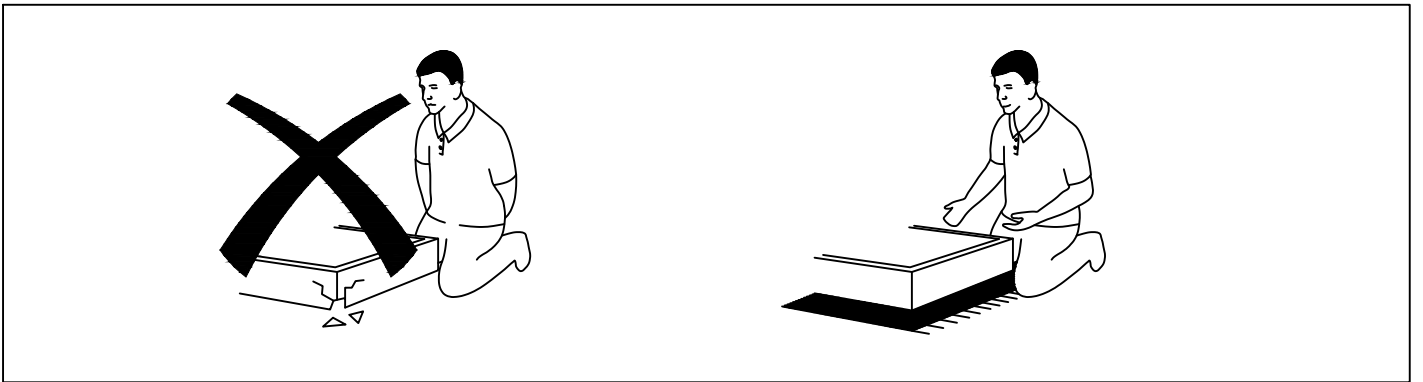


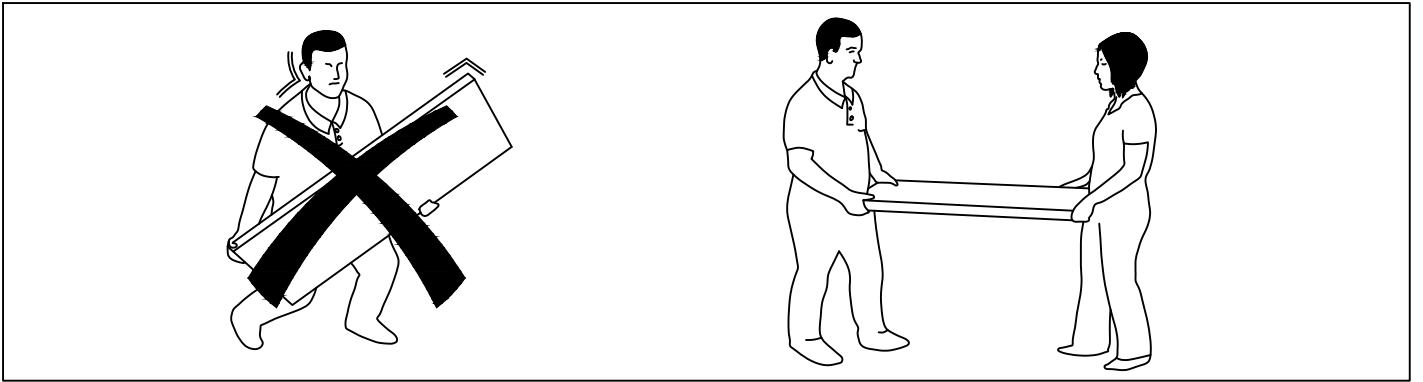

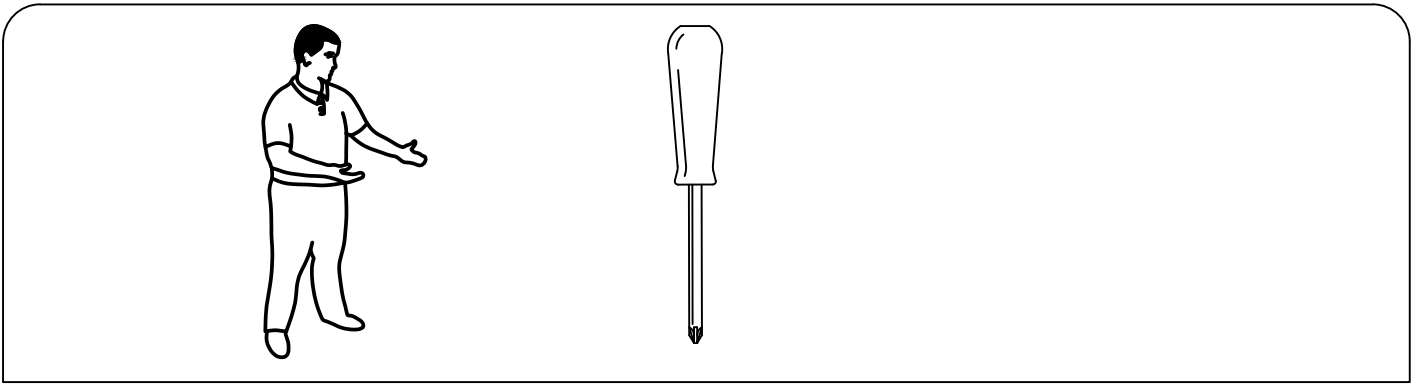

Please check that you have all the fittings

CF3FP

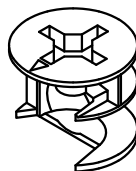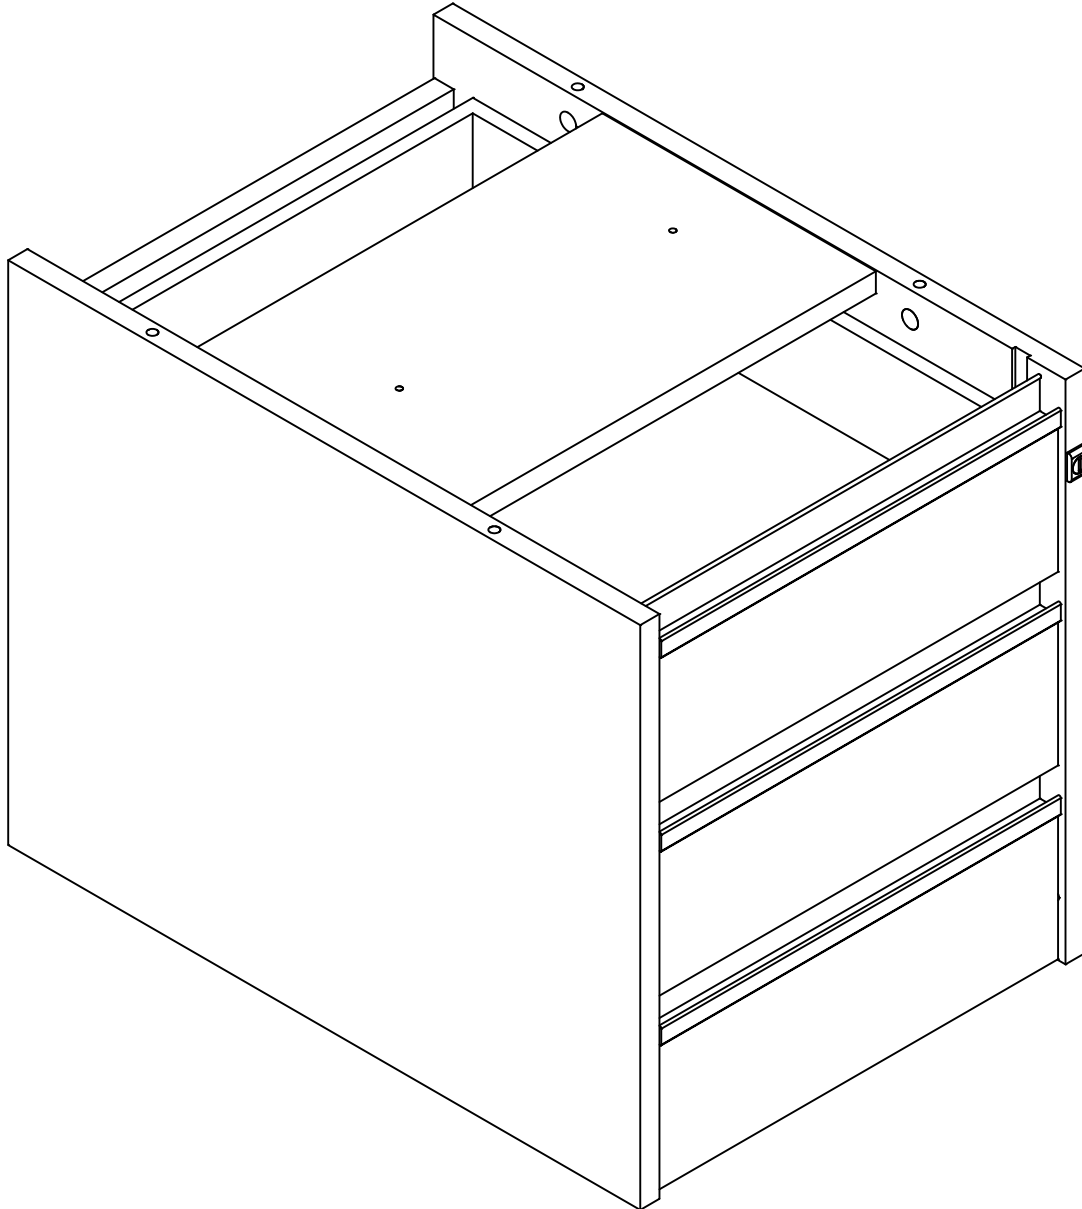

4

Minifix cam 15N  
CAM03


4

Quickfix spread bolt  
BLT06


4



1 1/4 x 8 screw  
SCR12

1



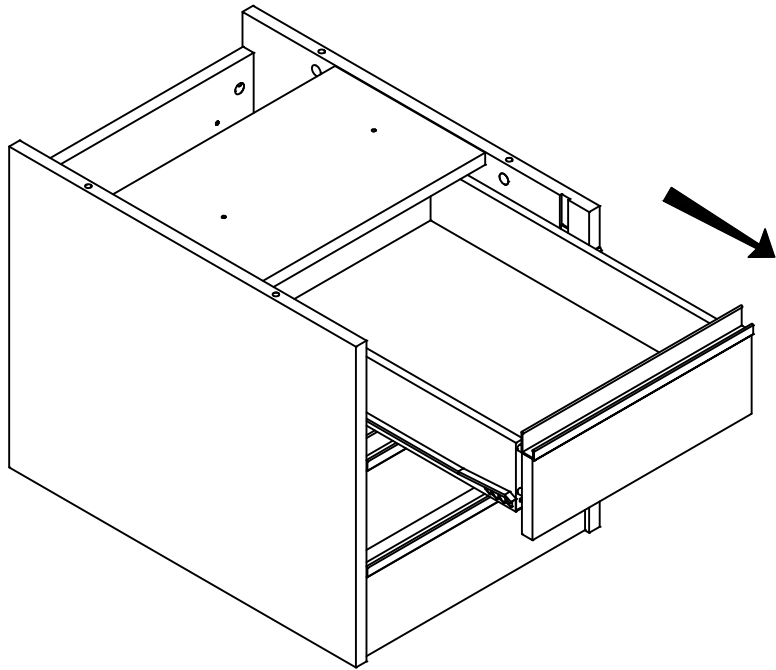


2

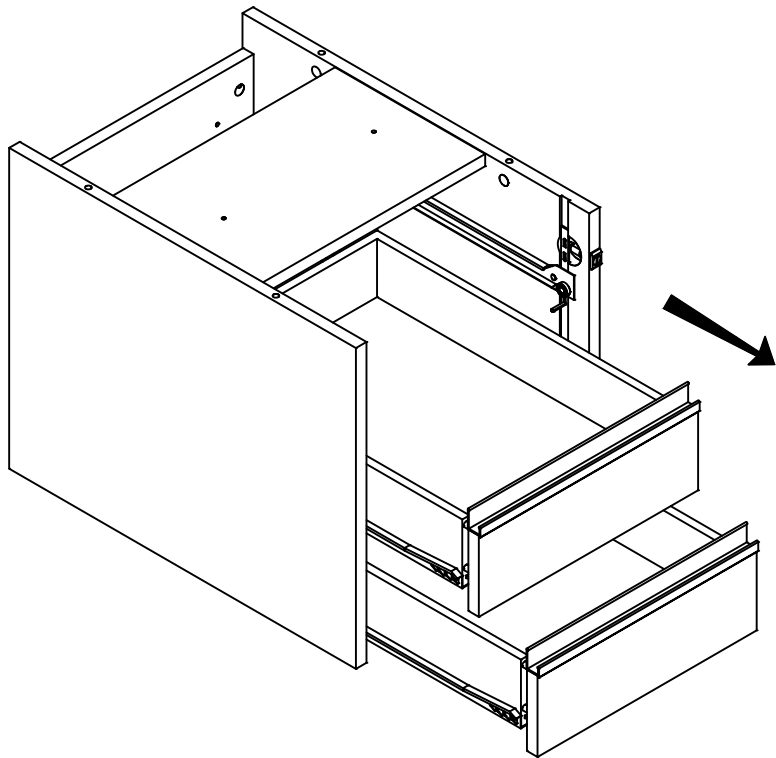

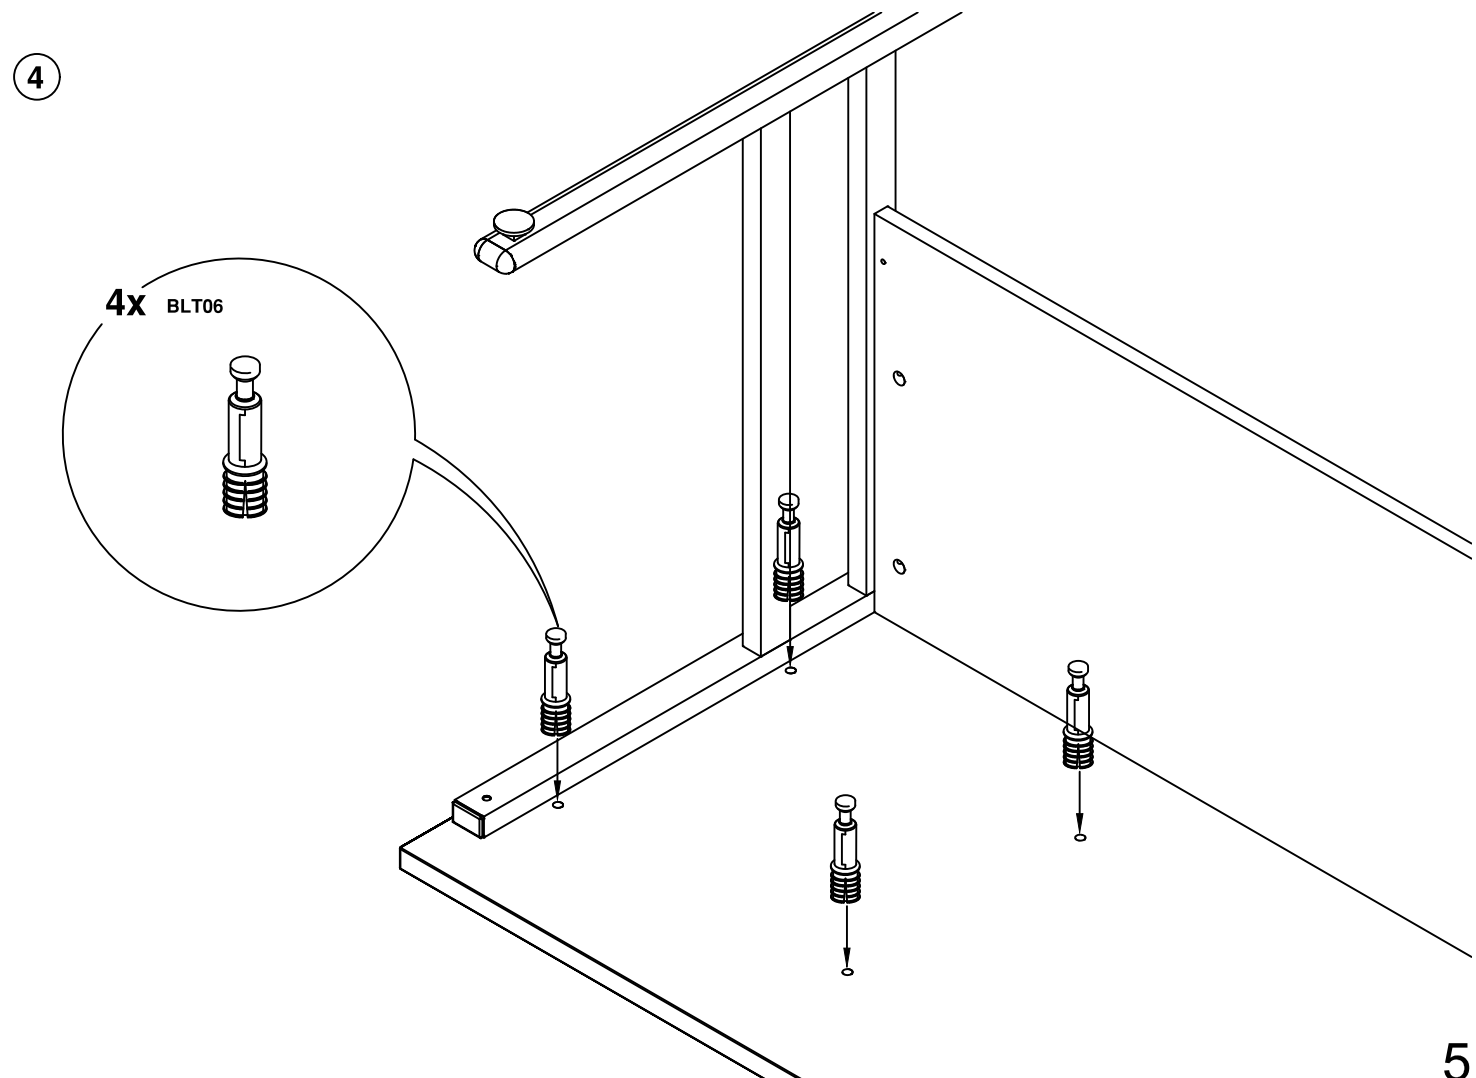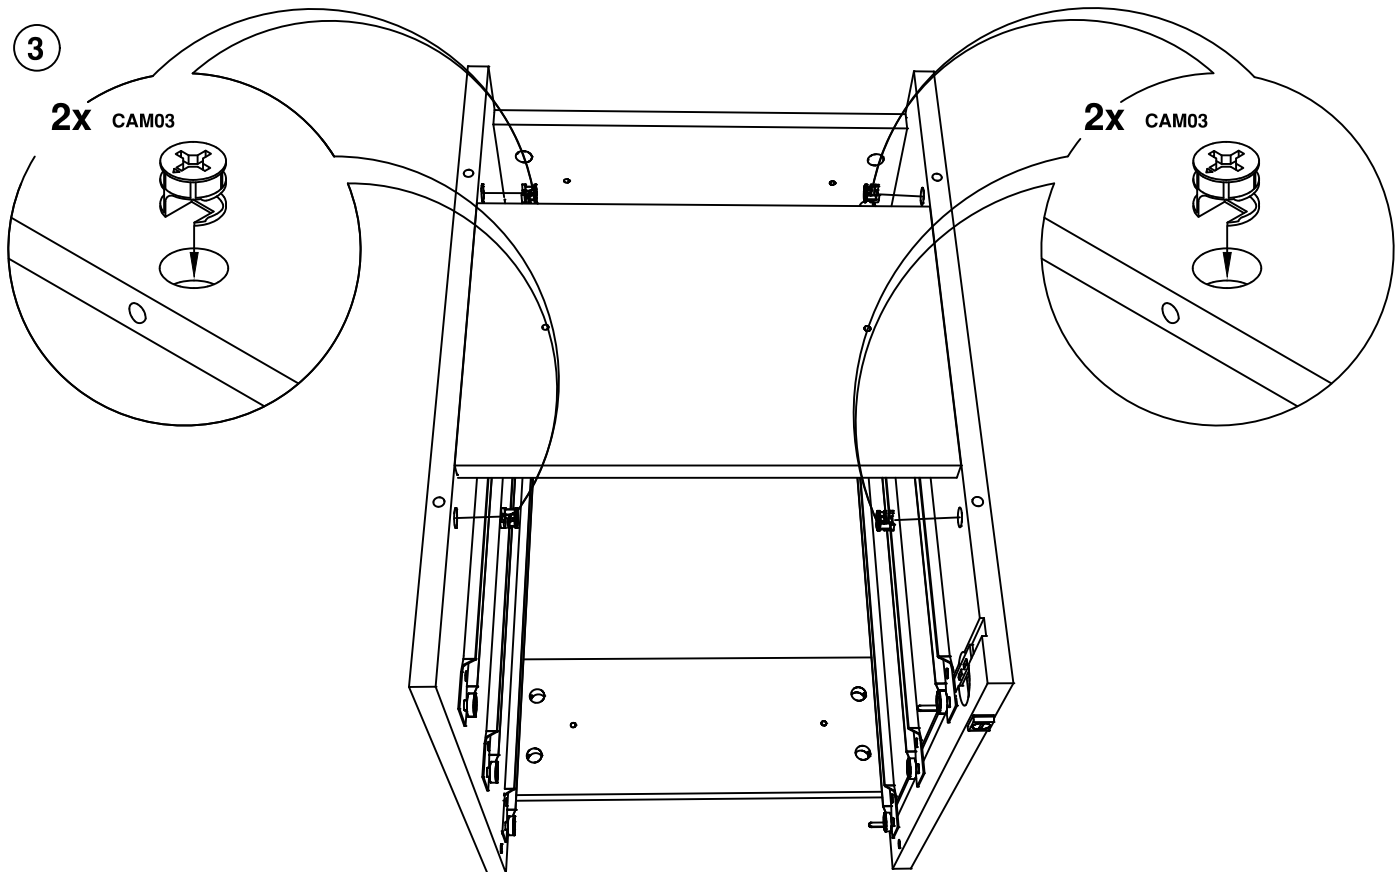


5

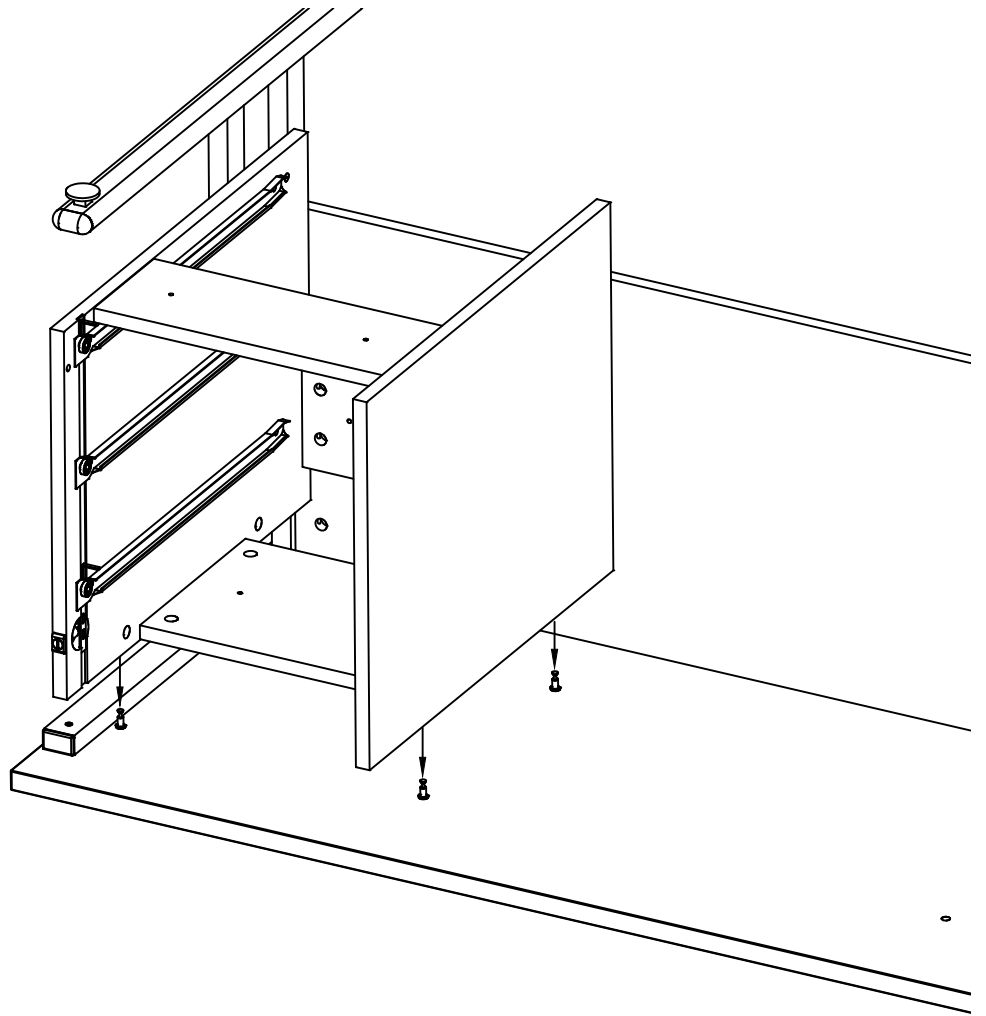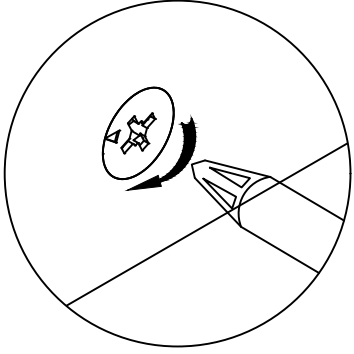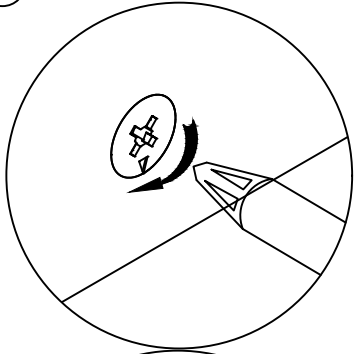


6

**4x** 1"1/4 x 8 screw  
SCR12

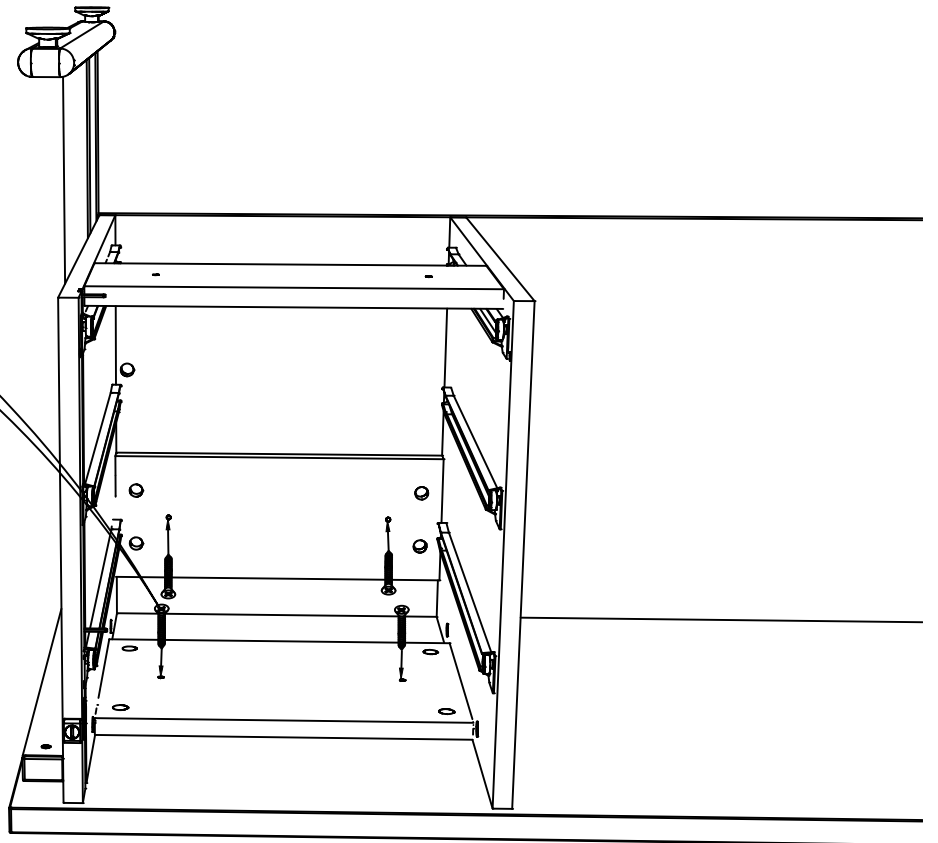

9

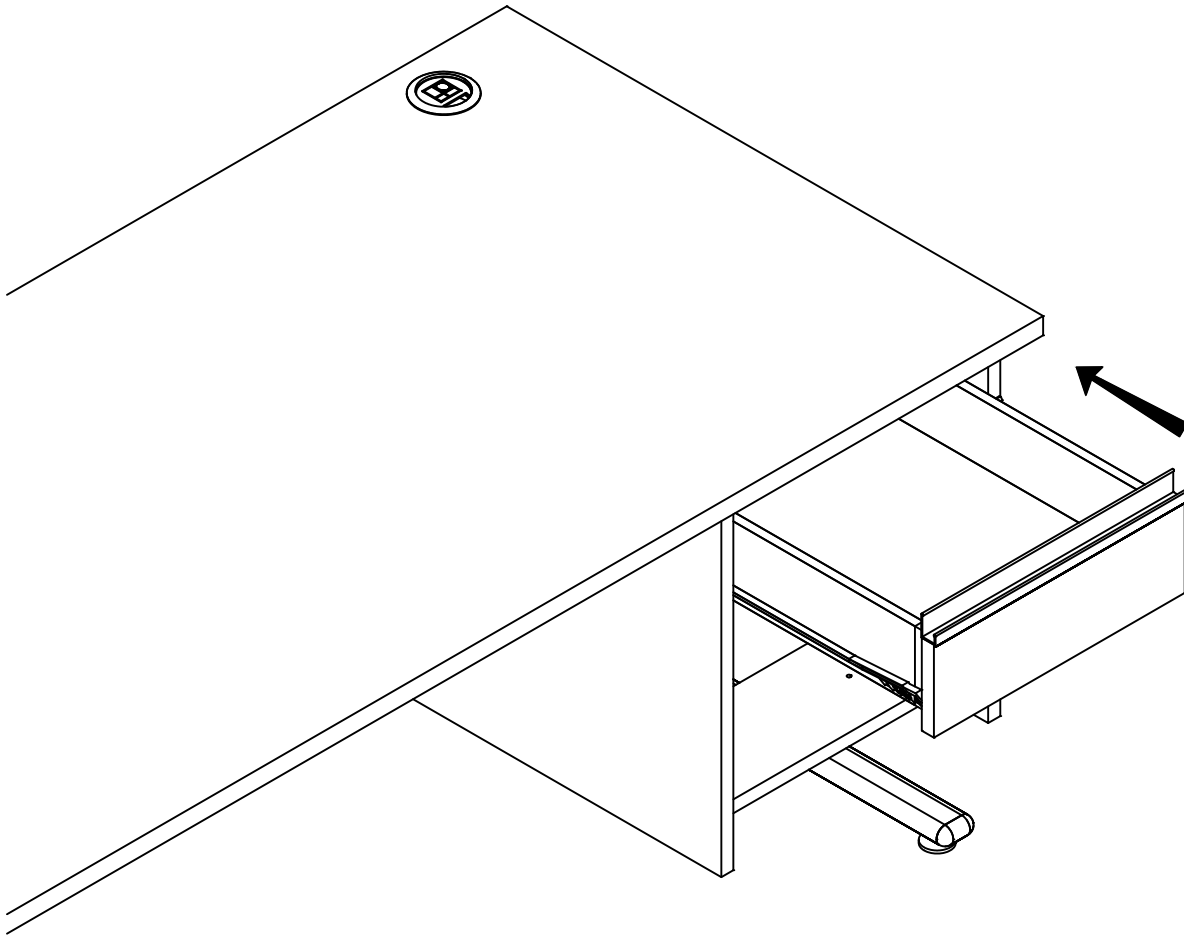

10

